




SOLUTIONS FOR MODERN WORKSPACE CONCEPTS

Unparalleled flexibility with EIZO EV2495 and EV2795

office monitors thanks to unparalleled connectivity

- ◆ Docking functionality via USB-C port, incl. graphic signal and 70-watt power supply
- ◆ LAN port to ensure a stable connection to the network infrastructure
- ◆ USB hub with three downstream ports for connecting peripherals.
- ◆ USB-C daisy chain functionality to easily link multiple monitors
- ◆ KVM switch functionality for switching between two computers with just one keyboard and one mouse

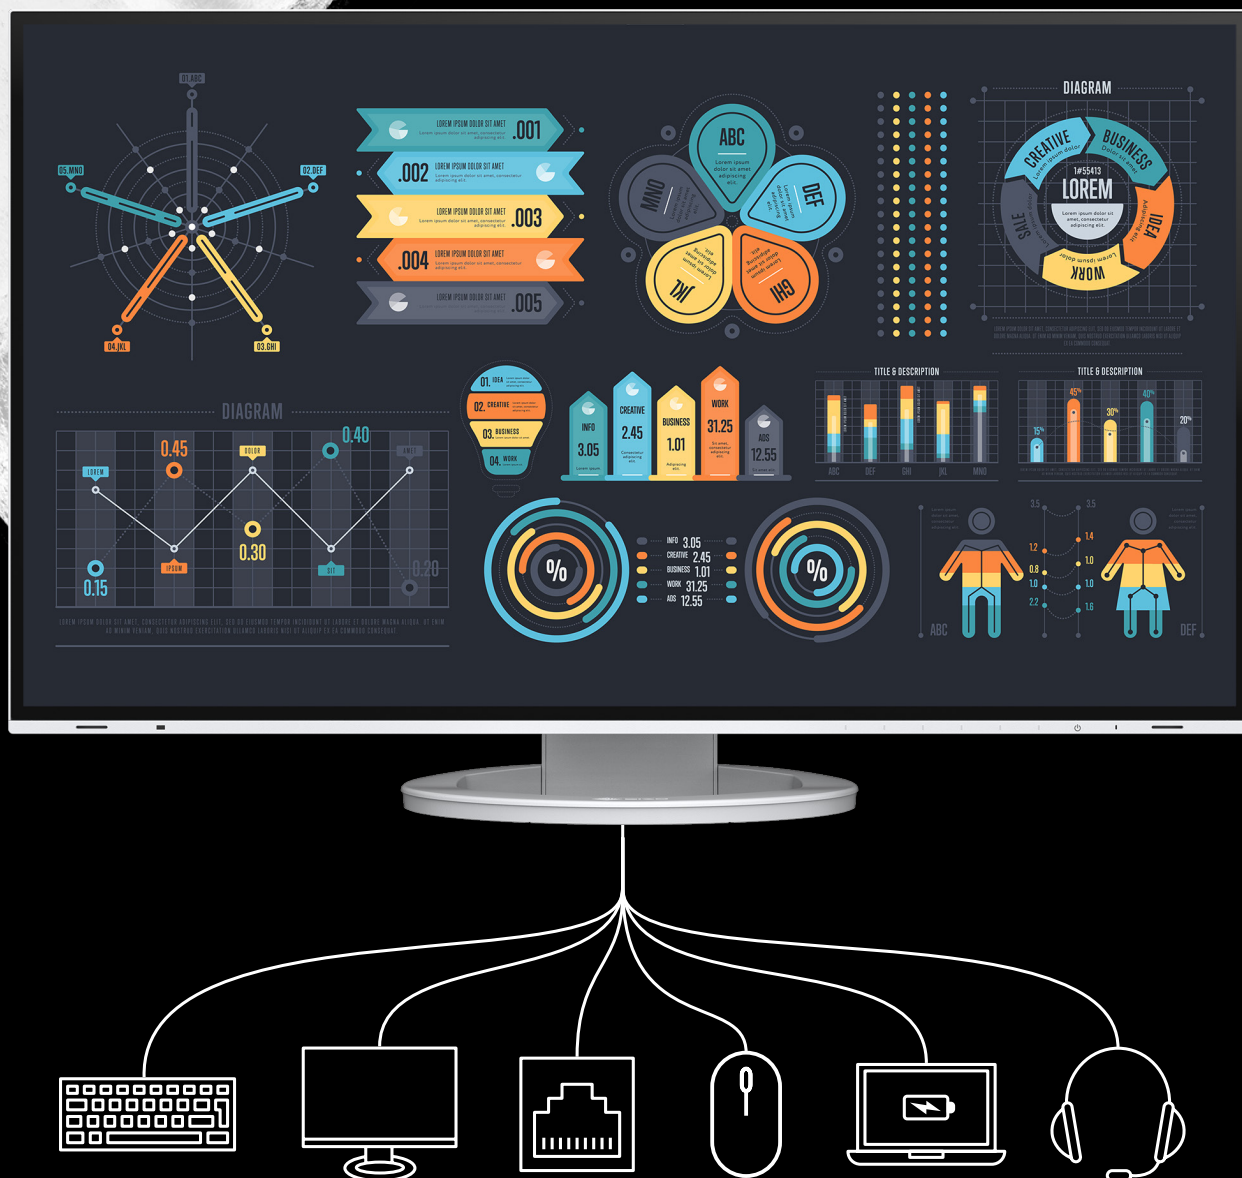

HOW TO REDUCE CLUTTER, INCREASE FLEXIBILITY AND CREATE A MODERN WORKPLACE

The modern workplace is now tidier and, more importantly, offers greater flexibility than ever before. Employees no longer need their own workplace at the office. Workstations are now increasingly shared by many people who change desks from day to day. Working from home is also playing a bigger and bigger role at modern companies. That's why it is more important than ever for users to

always be flexible and have easy, convenient access to the entire IT infrastructure at all times. The **FlexScan EV2495 and EV2795 office monitors from EIZO** make this easy by providing you with everything you need to set up your own workstation quickly and easily thanks to their unparalleled range of ports.

FEATURES



Graphic and audio signal

You can easily connect your laptop or desktop computer to your monitor thanks to the USB-C port – the USB-C cable transmits the graphic and audio signal. The simplicity of connecting your laptop to the monitor in particular makes it easy to reap the considerable benefits that a desktop monitor offers compared to a laptop display. Improved ergonomics (such as sitting posture) is just one of these benefits. This means that one cable is the only thing you need to access all the benefits of modern working.

Docking functionality

Three peripherals, such as a mouse, keyboard, headset or webcam, can be connected directly to the monitor via three USB downstream ports. All connected devices are available as soon as the computer is connected to the monitor via the USB-C upstream ports.

Daisy chain functionality

Connect multiple monitors without excessive cable clutter thanks to daisy chain compatibility: USB-C allows several monitors to be easily linked. That means only one monitor needs to be connected to the computer, while the rest are then connected to one another. This significantly reduces the number of cables trailing out of the PC.

LAN port

An integrated LAN port provides access to the entire network infrastructure. By connecting a network cable to the monitor, the computer receives the network signal via USB-C. This is particularly beneficial for laptops that no longer have a LAN port. This guarantees a quick and stable data transfer, which is necessary for video conferences, for example, and not always possible with a Wi-Fi connection.

Charging function

The monitors reliably charge small computers and laptops with a 70-W power supply via USB-C. This creates more space on your desk as you no longer need an additional power supply for your computer. So forget the irritation of taking your laptop charging cable wherever you go – USB-C means greater freedom and flexibility.

KVM switch functionality

Two USB upstream ports and the integrated KVM (keyboard video mouse) switch allow the monitors to be used as a keyboard and mouse switch. This means that you can use two computers with just one keyboard and one mouse. For example, this means you can use the same monitor with your home and company computers when working from home.

TECHNICAL SPECIFICATIONS

	EV2495	EV2795
SCREEN SIZE	24.1"	27"
	Aspect ratio 16:10	Aspect ratio 16:9
RESOLUTION	1920 × 1200	2560 × 1440
PANEL	IPS	IPS
MAX. BRIGHTNESS	350 cd/m ²	350 cd/m ²
SIGNAL INPUTS	1 × USB-C 1 × DisplayPort 1 × HDMI	1 × USB-C 1 × DisplayPort 1 × HDMI
USB PORTS	Upstream: 1 × USB-C 1 × USB-B Downstream: 1 × USB-C 3 × USB-A	Upstream: 1 × USB-C 1 × USB-B Downstream: 1 × USB-C 3 × USB-A
DAISY CHAIN	Via USB-C downstream	Via USB-C downstream
LAN PORT	RJ45	RJ45
KVM SWITCH	◆	◆
STAND	Tilt range: 35° to the back 5° to the front Rotation: 344° Height adjustment: 182 mm	Tilt range: 35° to the back 5° to the front Rotation: 344° Height adjustment: 177 mm
WARRANTY	Five years, including on-site replacement service	



Austria | www.eizo.at
Belgium | www.eizo.be
Czech Republic | www.eizo.cz
Germany | www.eizo.de

Hungary | www.eizo.hu
Italy | www.eizo.it
The Netherlands | www.eizo.nl
Nordics | www.eizo.se

Slovakia | www.eizomonitor.sk
Switzerland | www.eizo.ch
United Kingdom | www.eizo.co.uk