

[→ Product Website](#)[→ Video Playlist](#)[→ Experience in AR](#)

The ColorEdge CG2700X combines absolute precision with the extremely fine 4K UHD resolution of 3840 x 2160 pixels. It ensures a constant image display at the highest level and offers numerous connections including USB-C and LAN. This makes the CG2700X the ultimate universal monitor for creative professionals with the highest demands. Whether used in photography, video post-production or pre-press, the integrated sensor ensures that the monitor image always matches the displayed file. The maximum brightness of the high-resolution 4K display of 500 cd/m<sup>2</sup>, the True Black panel with a contrast of 1450:1 and the pre-installed HDR gamma curves make the monitor the ideal monitor also for the post-production of 4K films. Photographers will also appreciate the extremely high detail resolution of 164 ppi. Thanks to the USB-C port, the CG2700X offers a very convenient connection to mobile high-performance computers. Image and data signals are transmitted with just a single cable - at the same time, the laptop can be charged with up to 94 watts. The integrated USB hub, HDMI and DisplayPort connections as well as the included light protection cover round off the lavish features of the CG2700X.


- ✓ 27-inch wide gamut LCD with 3840 x 2160 pixels (4K UHD)
- ✓ Wide colour gamut with 99% AdobeRGB and 98% DCI-P3 colour space coverage
- ✓ Integrated sensor for fully automatic self-calibration
- ✓ 500 cd/m<sup>2</sup> maximum brightness, contrast 1450:1 thanks to True Black technology
- ✓ 10-bit display, 16-bit 3D look-up table
- ✓ Digital Uniformity Equalizer for perfect luminance distribution and colour purity
- ✓ HDR targets for HDR-HLG and HDR-PQ-EOTF
- ✓ USB-C (DisplayPort signal and up to 94 Watt Power Delivery), DisplayPort and HDMI inputs
- ✓ RJ-45 LAN port, USB hub with four USB downstream ports, two of which are 5Gbps (USB 3) and two USB 2
- ✓ 5-year warranty for highest investment security

## Precision and color accuracy


## High-contrast, bright and crisp screen

### 4K UHD resolution


Thanks to the resolution of 3840 x 2160 (4K UHD), the CG2700X has an enormous pixel density of 164 ppi. Visible monitor pixels are guaranteed to be a thing of the past and even the monitor display gives a very meaningful impression of the subsequent print resolution. The IPS panel has a maximum brightness of 500 cd/m<sup>2</sup> and achieves a contrast ratio of 1450:1. Films can be assessed, edited and graded with the CG2700X in full 4K UHD resolution. The LCD module allows a viewing angle of 178 degrees. This keeps colour tones and contrasts stable in the user's viewing cone.

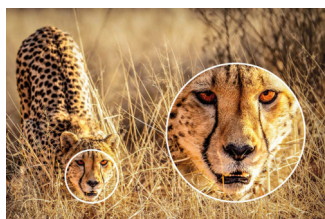

4K-UHD (3840 x 2160)

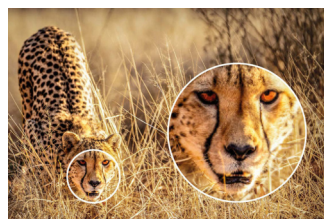

WQHD (2560 x 1440)

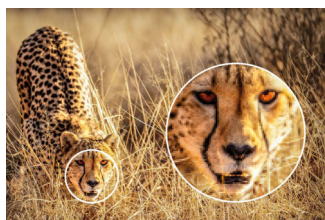


Full HD (1920 x 1080)

### FOR SATURATED COLORS

## Wide gamut color space


To be able to use the entire colour spectrum of modern cameras, you need a monitor with the largest possible colour space. Only then is it possible to visually assess and edit the saturated hues contained in the file. That is why the IPS panel of the ColorEdge CG2700X covers, for example, the wide AdobeRGB photo gamut as well as the CMYK print gamut ISO-Coated V2 to more than 99 %. This means that the full colour spectrum of modern

cameras is represented unaltered and without gaps. And a precise simulation of the print result in the softproof view is also guaranteed.

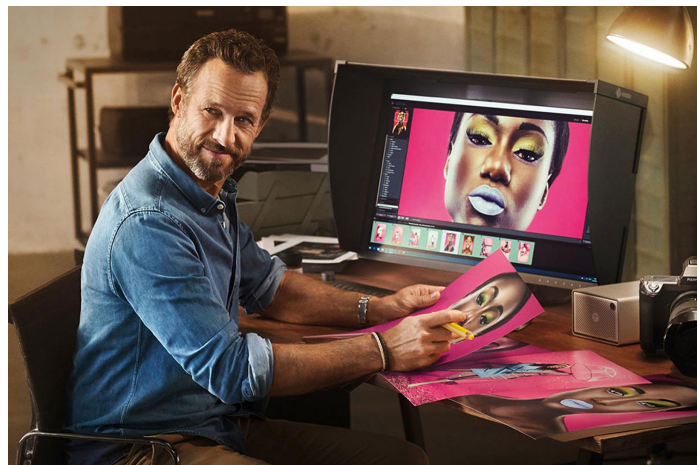


## Smooth and fluid transitions and gradients thanks to 16-bit LUT and 10-bit mode


The LUT (look-up-table) on the CG2700X employs internal calculations with 16 bits for an extremely high colour depth and outputs the signals with up to 10 bits. This provides billions of hues for calculating the precise monitor display, effectively preventing display errors caused by the monitor such as banding or clipping, which can result in tonal breaks in gradients or unnecessary colours in greyscale. Even fine nuances and structures in dark or highly saturated areas of the image can be displayed in a differentiated and detailed manner.

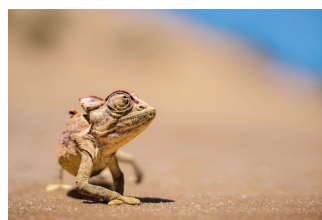

10 bit (LUT: 16 bit)

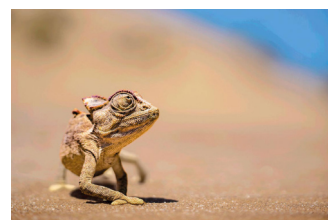

8 bit (LUT: 16 bit)

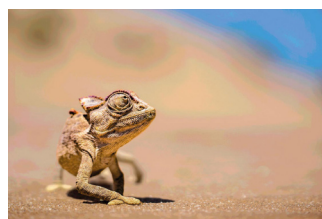


8 bit (LUT: 8 bit)

## COLOR DEPTH FOR PLASTIC IMAGES

### True Black

With its high contrast ratio, the CG2700X displays deep blacks, which often look pale or washed out on a typical LCD monitor due to the backlight. This is especially true when viewing the monitor from the side in dimly lit rooms. The CG series is equipped with a retardation film for this purpose, which allows for this depth of blacks even at wide viewing angles.

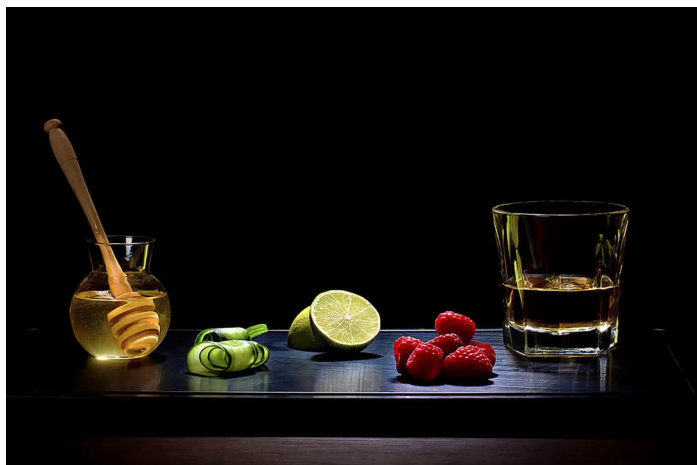

## PERFECT RENDERING ACROSS THE ENTIRE SCREEN

### Digital Uniformity Equalizer

Each individual monitor panel is precisely measured over the entire surface at the EIZO factory. Any inhomogeneities in brightness and unnecessary colour are detected and removed. This process (Digital Uniformity Equalizer) guarantees that identical colours always look the same over the entire service life of the monitor, no matter where they are displayed. Only in this way is precise image processing and retouching possible.



With DUE



Without DUE

## Integrated sensor for self-calibration

An integrated calibration sensor ensures you achieve maximum colour accuracy. The sensor is perfectly aligned

to the monitor, takes environmental influences such as light into account, and correlates the centre of the image with the edge of the image. This ensures an even result over the whole monitor.

The sensor is located in the bezel and is only extended when performing measurements. This means that no external calibration device is necessary, and the colour fidelity of the monitor is optimal at all times.

The CG2700X is equipped with the latest sensor technology, allowing it to be recalibrated on the fly. So you can continue working with applications that are not colour-critical while the monitor calibrates. The sensor only takes up a small amount of space on the screen during calibration and therefore does not interfere. Calibration can also take place completely automatically at definable times, even if the computer is switched off or not connected to the monitor at all.



Exemplary image

## Stable display thanks to industry-leading AI


To ensure gradations, colour, brightness and other characteristics are always accurately displayed even when the ambient temperature changes, the ColorEdge CG2700X is equipped with a temperature sensor. It accurately measures the monitor's internal temperature, while an AI (artificial intelligence)-assisted correction algorithm\* distinguishes between different temperature change patterns and calculates a precise adjustment in real time.

\* Patent pending




## Stable color reproduction in just three minutes

It takes a traditional monitor a minimum of 30 minutes for the brightness, chromaticity and tone values to stabilise, whereas the ColorEdge CG2700X only needs three minutes. It means that users know they can reliably trust the colours of the monitor within a short time after switching in on.

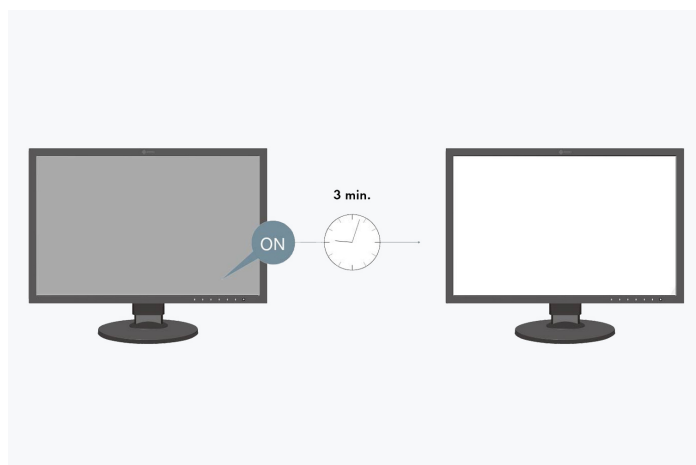

ColorEdge

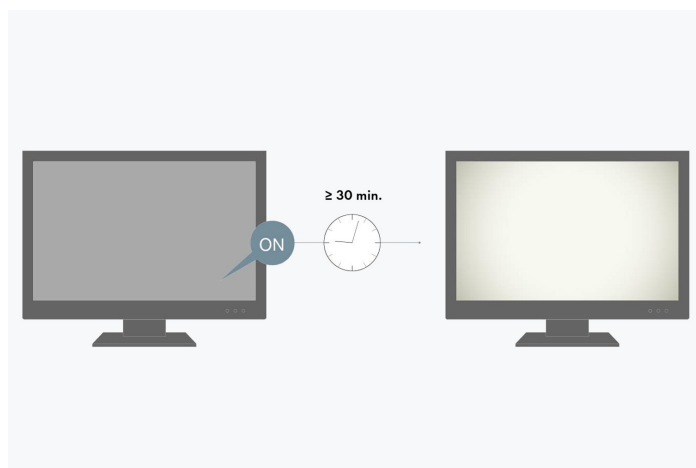


Typical monitor

## READY TO USE RIGHT OUT OF THE BOX

### Perfect settings right from the factory

Every ColorEdge CG2700X is individually measured and optimally configured in the factory, enabling it to be used immediately after it has been unboxed. To this end, the gamma curves for the red, green and blue channels are closely checked and corrected, if necessary. This unique EIZO factory calibration enables the user to start using the monitor with the preset gamut range right out of the box. This painstaking calibration at the factory ensures that the user can quickly recalibrate the monitor if needed using ColorNavigator.

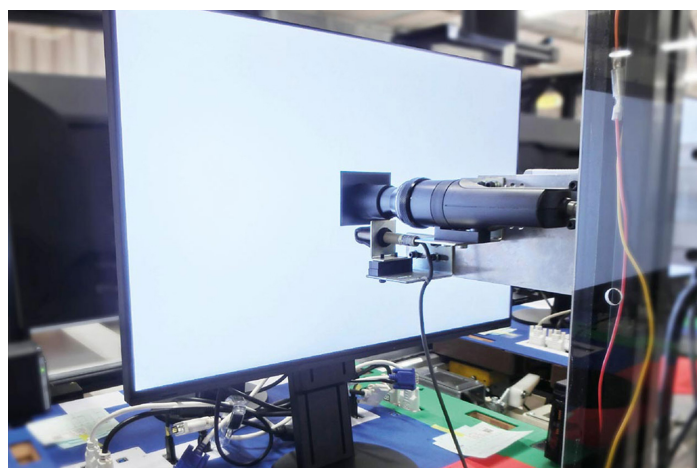

## Calibration report

Each ColorEdge CG2700X comes with an individual calibration report that shows the measurement results of the factory calibration of the monitor. The report proves the homogeneity, gamma curve, colour space coverage and white point of the monitor.

[More information on the calibration report](#)




## EIZO software for fast calibration and printing

Each monitor ages and changes its display properties. This is why graphics monitors, which require an absolutely constant image display over the entire service life, must be regularly calibrated and adjusted. With the free calibration software ColorNavigator from EIZO, the ColorEdge CG2700X can be adjusted within 90 seconds (measured with a MacBook Pro and EX4), easily and without any losses. This is to ensure that the same image still looks the same on the monitor five years from now.

[More information on the EIZO ColorNavigator](#)

For users who want to calibrate several monitors in the company, EIZO offers the ColorNavigator Network tool. This allows for the quality management of many ColorEdge monitors to be carried out centrally. Among other things, an administrator can deliver calibration targets to the users and trigger the automatic calibration of ColorEdge monitors of the CG series. With the help of a secure cloud server offered by EIZO, it is possible to administer this central quality management across numerous locations or even continents.


[More information about the ColorNavigator Network](#)

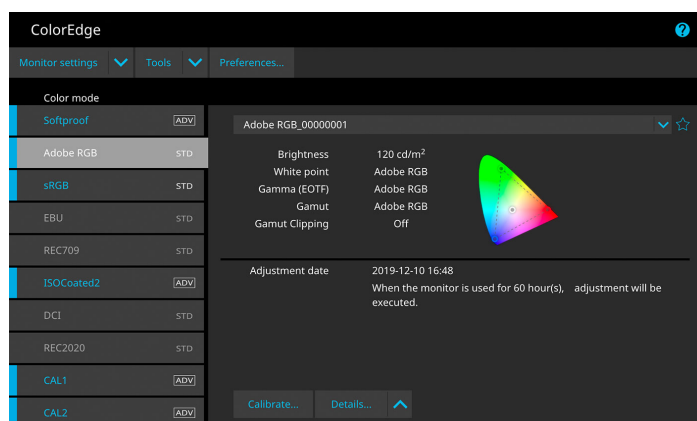

## FOR OPTIMIZED COLOR REPRODUCTION

### EIZO microchip

The CG2700X has a high-quality microchip (ASIC, Application-Specific Integrated Circuit), which EIZO developed especially for the special requirements involved in work demanding high colour accuracy. This microchip is the brain of a ColorEdge as it guarantees the precise, uniform and constant image display that is the hallmark of EIZO.

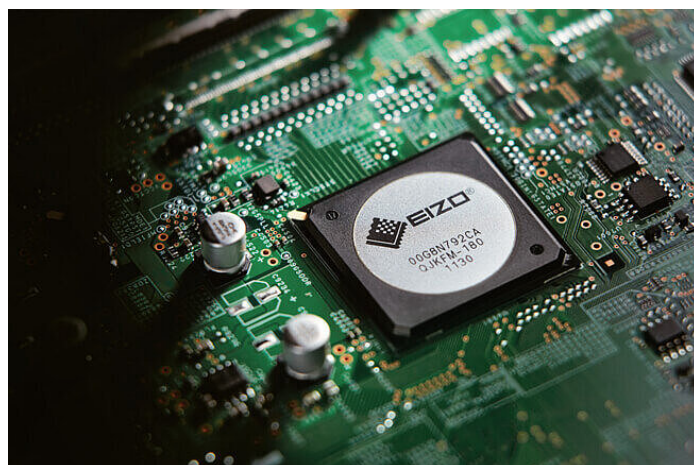


## Video and film production Features for post-production

### Precise color reproduction thanks to high-resolution 3D LUT

The 3D LUT ensures the most precise tonal value allocation and extremely accurate colour tone reproduction, which can be seen, among other things, in the grey wedge. In LCDs, the brightness levels vary from module to module in relation to the image signal and the colour mixing (addition) of red, green and blue. This can only be accurately recorded and controlled with the help of particularly precise measuring devices.

Ex works, EIZO therefore adjusts every monitor in the CG series and its colour and tone curve. This ensures a consistent colour temperature across the entire grey scale. The result: colour reproduction is the same, precise and reliable for every single CG2700X.

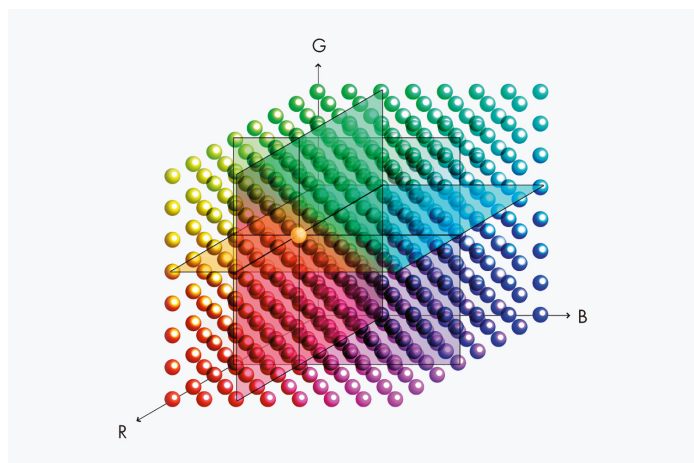


## HDR Gamma

The ColorEdge CG2700X supports the two gamma curves for HDR video: the HLG (Hybrid Log-Gamma) curve and the PQ (Perceptual Quantization) curve. Up to the maximum brightness of 500 cd/m<sup>2</sup>, thus the CG2700X ensures a meaningful impression of the processed HDR material, so that a HDR reference monitor like the ColorEdge CG3146 is often only required in the final production step.

## Gamut pre-sets for film and video production

Pre-sets for the DCI-P3, BT.709 and BT.2020 colour spaces are precisely calibrated ex works and ensure working with correct gamma values. In addition, colour modes for PQ (DCI and BT.2100) and HLG (BT.2100) for displaying HDR content are also pre-set at the factory. The brightness setting for each pre-set can be conveniently adjusted and recalibrated thanks to the integrated calibration sensor. HDR Mode of Windows and MAC OSX is directly supported. This provides an easy way using typical HDR video application displaying the right tone curve at the matching monitor setting.

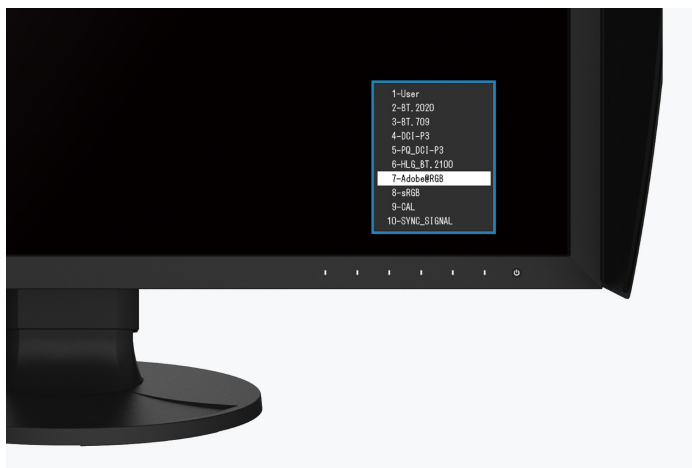

## Safe in sight thanks to the Safe Area Marker

Ideal for subtitles and critical images: Thanks to the Safe Area Marker, you know which area of the scene is dis-

played in a different aspect ratio. You can therefore see immediately whether subtitles, texts or important picture elements are in the visible area. You can adjust the marker color, size and aspect ratio so that the marker is clearly visible in every image.



## Automatic color settings

The ColorEdge CG2700X offers Sync Signal functionality, which adjusts monitor settings such as signal range and colour format to the video signal, offering consistent color settings during the entire production process.

## Luminance warning

The brightness warning can be used to mark areas that exceed a certain brightness (300, 500, 1000 or 4000 cd/m<sup>2</sup>) when using the PQ mode. These areas are marked optionally in yellow or magenta.




Brightness warning



Without brightness warning

## Gamut warning

The Gamut warning operates in two modes: Rec. 2020 image content that can't be displayed in the Rec. 709 gamut is displayed in grayscale. Alternatively, clipping mode is simulated in Rec. 709 to show how Rec. 2020 material would look on HDTV devices.

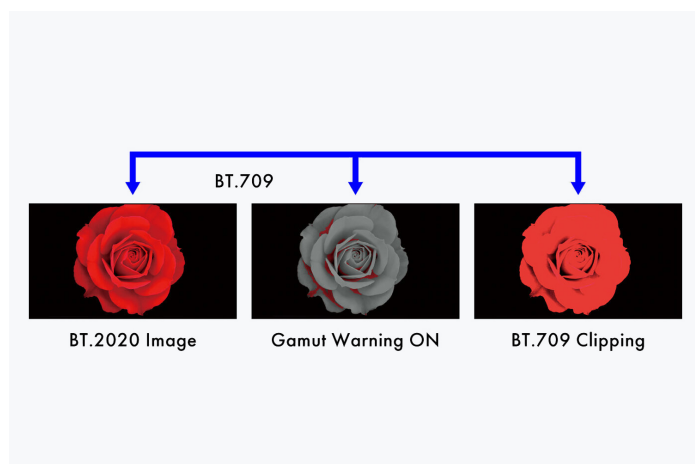

## "Nearest Neighbor" interpolation setting

The ColorEdge CG2700X offers the Nearest Neighbor interpolation setting as an option for image scaling and resampling. With this upscaling, Nearest Neighbor copies neighbouring pixels while maintaining colour fidelity. If Nearest Neighbor is disabled, colour tones are interpolated between neighbouring pixels, providing smoother transitions. Users can select the interpolation method best suited to the project for different resolution


## Ideal for video and film production: HDMI

Films are normally recorded at 24 fps. They therefore appear unnatural with the conventional monitor rendering of 60 Hz. The monitor supports an image frequency of 24 and 60 Hz. This means that you can view and edit your film material as it was taken.

HDMI signals with refresh rates of 60, 50, 30, 25 and 24 Hz are supported. The monitor also features I/P conversion.


## 4K zoom

Users can quickly and easily make selections directly in the monitor menu to zoom in on various areas of the monitor image so as to assess details and sharpness.

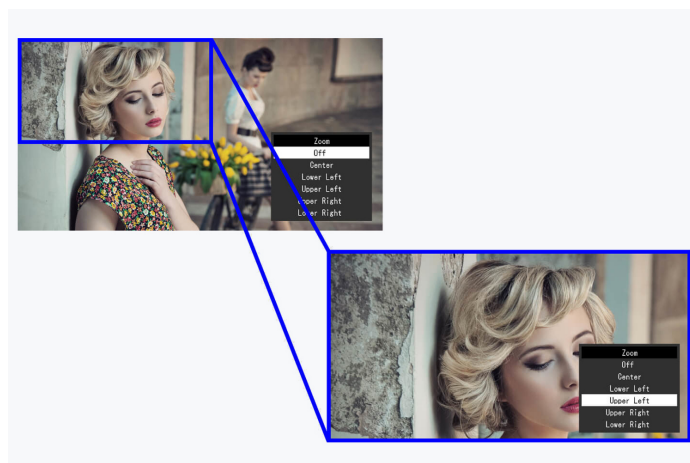

## DCI 4K cropping

The DCI 4K cropping function allows users to display a DCI 4K (4096 x 2160) signal and crop content outside the limits of the panel's native 4K UHD (3840 x 2160) resolution. Users can choose between three options that determine which part of the image is displayed.

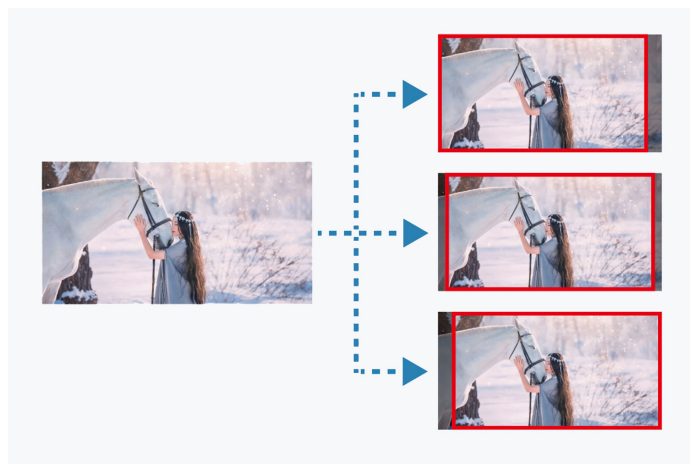




## Variety of ports

### Best connectivity

#### Cutting-edge connectivity with USB-C

Image signal, USB data transfer as well as power supply with up to 94 W, all this and more can be realised with a single USB-C cable. This makes the ColorEdge CG2700X the central dock of the graphic workflow. Peripheral devices such as a mouse, keyboard or printer can be connected directly to the USB-A ports. Mobile devices such as laptops or tablets can even be charged via the USB-C cable with up to 94 W via the USB-C cable. In this way, a laptop and CG2700X can be turned into a fully-fledged desktop workstation with a quick flick of the wrist.

[Read more about USB-C in the EIZO Academy.](#)

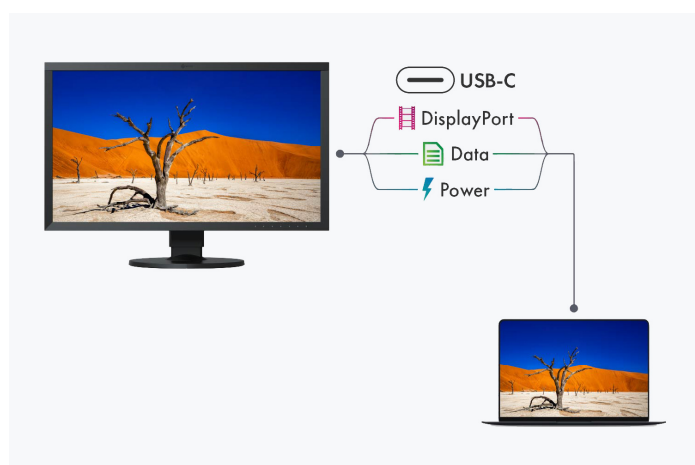

#### One monitor, many ports

The CG2700X supports a wide range of video formats via USB-C, HDMI and DisplayPort interfaces. This means that the monitor can not only be integrated into PC-based workflows but can also be used with HDMI feeders.



#### STABLE NETWORK CONNECTION

##### LAN port

The monitor has a dedicated LAN port to ensure a stable wired network connection. Laptops and PCs require only one USB cable to be connected to the CG2700X to gain network access via the monitor. This is particularly advantageous for laptops that do not have a LAN connection and allows for fast and stable data transfer, which is required for video conferences, for example. As a network device the monitor has its own MAC address.

Optionally, the "EIZO MAC Address Clone Utility" software for Windows can temporarily assign the MAC address of the connected PC to the monitor. This transparency grants authenticated PCs network access through the monitor.



## TWO PCS, ONE CONTROL

### KVM switch

It's never been easier to operate different PCs with a single mouse and keyboard. With its USB upstream ports, the CG2700X has a built-in KVM (Keyboard Video Mouse) switch. The monitor automatically links the mouse and keyboard to the currently active source computer. This means, for example, that a desktop PC and a laptop or a work and home PC can be operated on the same combination of monitor, mouse and keyboard. This ensures uninterrupted work and a tidy workspace.

## Ergonomics

### Working in a relaxed manner


#### FOR THE SAKE OF THE EYES

### Flicker free

The monitor is flicker-free at every brightness setting. This is great for users, as their eyes will not tire as quickly, allowing them to work in front of the screen for longer periods of time without fatigue.

### Anti-glare coating: more image, less reflection


The CG2700X offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the CG2700X effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.

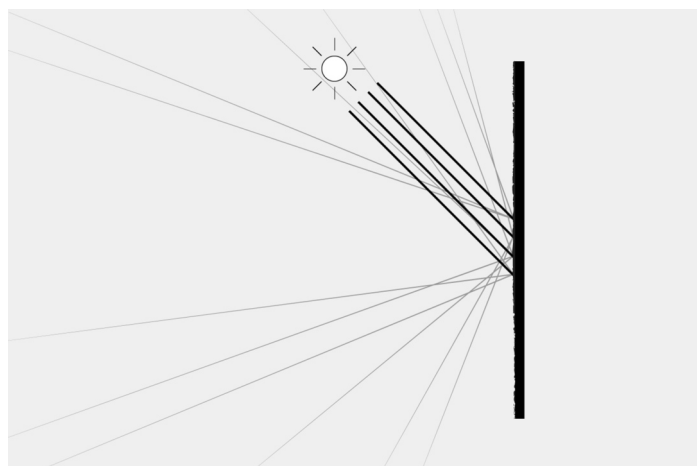


## Ergonomic stand

Our screens offer continuous height adjustment. Depending on the model, they can even be lowered to the base plate of the stand. This guarantees the best possible ergonomics, regardless of whether the user is sitting or standing in front of the screen. You can also swivel, rotate and tilt the monitor base to the position that is most comfortable for your posture.


The CG2700X can also be rotated into the portrait format, which is a great advantage for tethered shoots of people in the portrait mode, for example.

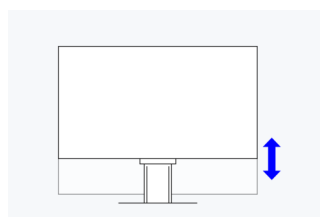


**Height**  
155 mm

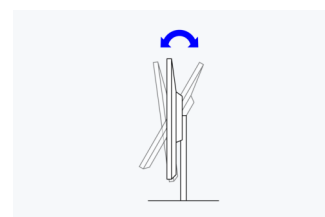

**Tilt**  
Between 5° forwards and 35° backwards

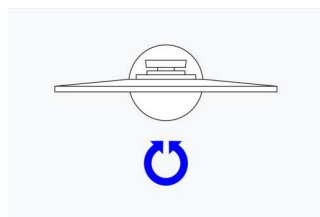

**Swivel**  
344°

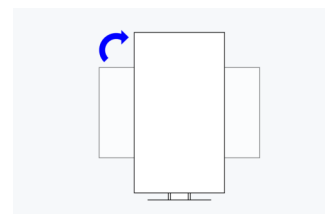

**Rotation**  
clockwise

## Customised key assignment

Depending on the model, up to two sensor buttons on the front can be assigned functions from the on-screen menu. The advantage: you have direct access to frequently used features.

## PROTECTION AGAINST REFLECTIONS AND GLARE

### Monitor hood

The monitor hood reduces reflection and brightness on the screen and helps protect your eyes. It is easy to attach and reduces the amount of light that hits the screen from above and from the sides.



## Sustainability

### Environmentally and socially conscious production

#### Socially responsible production

The CG2700X is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.




### Environmentally and climate friendly

Each CG2700X is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



### Sustainable and durable

The CG2700X is designed for a long service life that takes into account the entire lifecycle and impact on the environment. It is generally well above the five-year guarantee. Spare parts are available up to five years after the end of production. The monitor's long service life and the ability to repair it save resources and the climate. When designing the CG2700X we paid attention to reducing resource consumption by using high-quality components and materials and being meticulous in production.

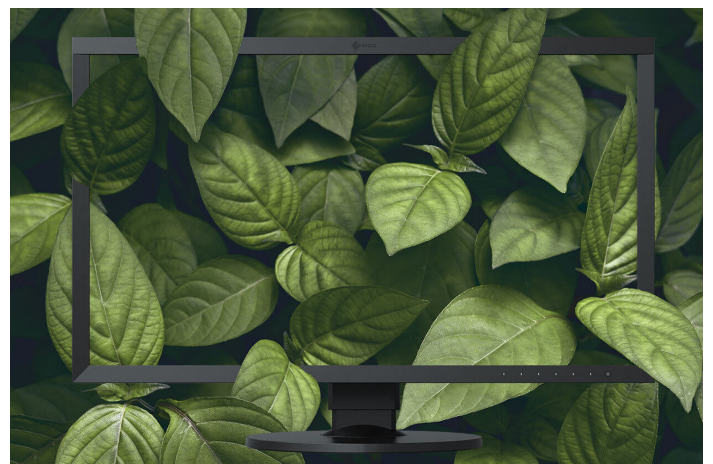



## Warranty

### Highest investment security


#### Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.



#### Guaranteed brightness and color reproduction

The CG2700X has a color and brightness guarantee for five years from the date of purchase for 10000 operating hours at a maximum brightness of 120 cd/m<sup>2</sup> and a color temperature between 5000 and 6500 K.

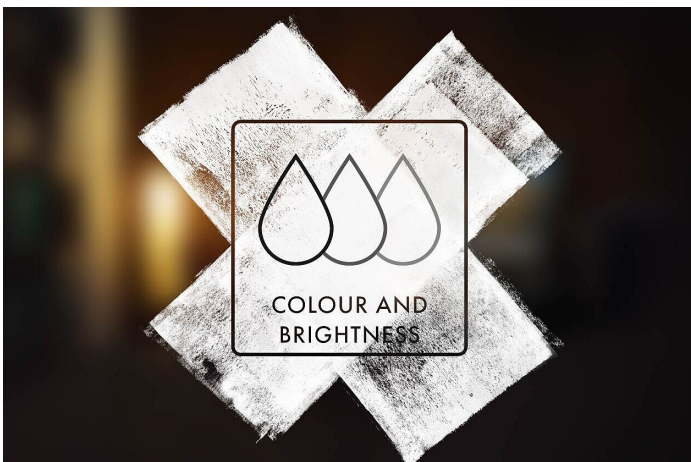

## Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	CG2700X	USB-C docking	✓
Case color	Black	KVM switch	✓
Areas of application	Photography, Video & Graphics	Hardware calibration of brightness and luminance characteristics	✓
Product line	ColorEdge	Integrated sensor for self-calibration	✓
Areas of application	Photography, image editing and retouching, Video Editing, Post Production and Colour Grading, Design, creation and illustration, Printing and Fine Art Printing, Textile and fashion industry	Scheduled self calibration	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	Preset color/greyscale modes	1x manual memory location, BT.2020, BT.709, BT.2100 HLG, AdobeRGB, DCI-P3, DCI-P3 PQ, sRGB, additional memory spaces through calibration, Sync Signal
EAN	4995047063643	Temperature color drift correction	✓
SCREEN		Brightness drift correction	✓
Screen size [in inches]	27	Digital Uniformity Equalizer (homogeneity correction)	✓
Screen size [in cm]	68,4	No flickering	✓
Format	16:9	True Black	✓
Viewable image size (width x height) [in mm]	596 x 335	Safe Area Marker	✓
Ideal and recommended resolution	3840 x 2160 (4K UHD)	I/P conversion	✓
Pixel pitch [in mm]	0,155 x 0,155	Noise suppression (HDMI)	✓
Pixel density [in ppi]	164	HDCP Decoder	✓
Supported resolutions	3840 x 2160 (4K UHD), 2560 x 1440, 1920 x 1200, 1920 x 1080 (Full HD), 1200p (@ 60 Hz), 1080p (@ 60 Hz), 1080i (@ 60 Hz), 1080p (@ 50 Hz), 1080i (@ 50 Hz), 1080p (@ 30/25/24 Hz), 720p (@ 60 Hz), 720p (@ 50 Hz), 576p (@ 50 Hz), 576i (@ 50 Hz), 480p (@ 60 Hz), 480i (@ 60 Hz)	Gamut warning	✓
Panel technology	IPS (Wide Gamut)	Luminance warning	✓
Max. viewing angle horizontal	178	Gamut Clipping	✓
Max. viewing angle vertical	178	Automatic signal input recognition	✓
Number of colors or greyscale	1.07 billion colors (USB-C, 10-bit), 1.07 billion colors (HDMI, 10 Bit), 1.07 billion colors (DisplayPort, 10 Bit)	On-screen menu languages	de, en, fr, es, it, se
Color palette/look-up table	278 trillion color tones / 16 Bit	Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Colour tone, Color saturation, 6 Colors, Color matrix YUV/ RGB, Input Range, Image noise reduction, DCI 4K cropping, Menu Rotation, Custom key, OSD language, Signal input, DUE priority
Max. color space (typical)	AdobeRGB (>99%), DCI P3 (>98%), ISO Coated V2 (>99%), Rec709 (100%), EBU (100%), SMPTE-C (100%), sRGB (100%)	Button Guide	✓
HDR Gamma	PQ, HLG	Integrated power unit	✓
Max. brightness (typical) [in cd/m²]	500	CONNECTIONS	
Recommended brightness [in cd/m²]	120	LAN/RJ-45	✓
Max. dark room contrast (typical)	1450:1	Signal inputs	HDMI (Deep Color, HDCP 1.4/2.3), USB-C (DisplayPort Alt Mode, HDCP 1.3/2.3), DisplayPort (HDCP 1.3)
Response time grey-grey alternation (typical) [in ms]	13	USB specification	USB 5Gbps (USB 3)
Max. refresh rate [in Hz]	60	USB upstream ports	1 x type C (DisplayPort Alt Mode, 94 W max.), 1 x type B
Backlight	LED	USB downstream ports	4 x Typ A ( 2 x 5Gbps (USB 3), 2 x USB 2)
		Network connection	RJ-45
		LAN standards	IEEE802.3ab (1000BASE-T)
		Graphic signal	DisplayPort (RGB, YCbCr), HDMI (RGB, YCbCr)

## ELECTRICAL DATA

Frequency	USB Type-C, DisplayPort: 26 - 137 kHz / 23 - 61 Hz; HDMI: 15 - 135 kHz / 23 - 61 Hz
Power consumption (typical) [in watts]	34
Maximum Power Consumption [in watts]	225 (at maximum brightness with all signal inputs and USB ports in use)
Max. Power consumption in stand-by mode [in watts]	0.5
Power consumption with power switch off [in watts]	0
Energy efficiency class	G
Energy consumption/1000h [in kWh]	36
Power supply	AC 100-240V, 50/60Hz
Max. USB-C Power Delivery [in Watt]	94

## DIMENSIONS & WEIGHT

Dimensions (incl. stand) (width x height x depth) [in mm]	638 x 416-571 x 245
Weight (incl. stand) [in kg]	9.8
Dimension drawing (PDF)	<a href="#">Dimension drawing (PDF)</a>
Rotatability of the stand [in °]	344
Tiltability forwards/backwards [in °]	5 / 35
Pivot between portrait / landscape	clockwise
Height adjustment range [in mm]	155
Hole spacing	100 x 100

## CERTIFICATION & STANDARDS

Certification	CE, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TÜV/Color Accuracy (Quick Stability), RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, RoHS, WEEE, China RoHS, CCC, EAC
---------------	---

## SOFTWARE & ACCESSORIES

Accompanying software and other accessories are available for download	ColorNavigator Network, ColorNavigator
Other box contents	Calibration report, Signal cable HDMI - HDMI, USB /signal cable (USB-C - USB-C), USB cable (Type A - Type B), Manual via download, Power cord, Quick guide
Accessories	CP200, PP200-K, EX4
Light protection cover	✓

## WARRANTY

Warranty periode	5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Included warranty	A brightness of at least 120 cd/sqm at a colour temperature of 5000 K to 6500 K is guaranteed for a period of 5 years or 10,000 operating hours, whichever comes first., Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.



**Experience the  
CG2700X in AR now!**