

[→ Product Website](#)[→ Experience in AR](#)

The all-round monitor for the office. The monitor's viewing angle, contrast ratio and brightness help deliver superb ergonomics for everyday use in the office. The clear display with an aspect ratio of 16:10 and a resolution of 1920 x 1200 pixels boosts work productivity. Visual elements and colours are displayed crisply and clearly. The EV2360's optional Auto EcoView function automatically adjusts the screen's brightness. This reduces energy consumption and lowers CO2 emissions from power generation. As an added bonus, having the right brightness levels helps prevent distracting glare. This way, both the user and the environment benefit. The EV2360 is targeted at companies, government agencies and home users who are looking for a high-quality monitor.


- ✓ 22.5" LCD monitor with a 16:10 aspect ratio and IPS technology for outstanding image quality
- ✓ Bezel only 1 mm: amazingly compact and ultra-elegant design
- ✓ Flicker-free image reproduction thanks to hybrid brightness control
- ✓ Auto EcoView and EcoView Optimizer deliver maximum power savings and superb ergonomics
- ✓ Optimised antireflection properties and flexible positioning
- ✓ USB 3.1 hub with one upstream and two downstream ports
- ✓ DisplayPort, HDMI and D-sub signal inputs
- ✓ Proven to be environmentally friendly and produced in a socially responsible way
- ✓ 5-year warranty for highest investment security

Design

A pleasing sight on any desk

Elegant design

The monitor's appearance can be the key to creating a pleasant working atmosphere. Whether you are at home or in the office, the monitor's virtually frameless design and ergonomic functionality allows it to fit naturally into your workplace environment. The housing is available in both an elegant black and in white, with matching white cables.

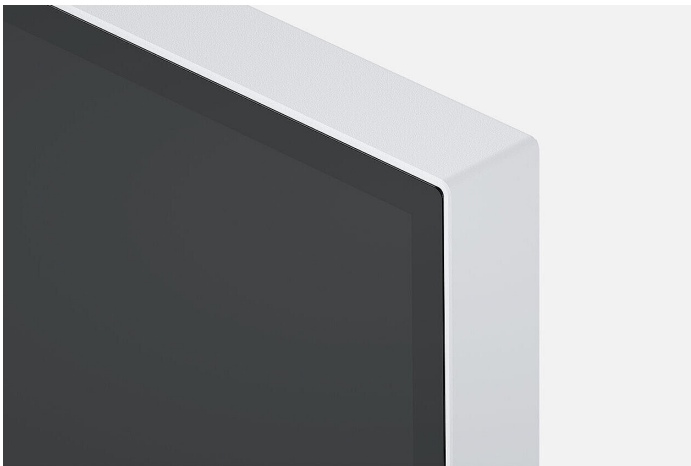

Controls integrated into bezel

Electrostatic switches are integrated into the front of the EV2360 instead of mechanical buttons. This ensures ease of use while also giving the monitor an extremely elegant look. The speakers and all the controls are also built into the bezel, pointing forward in the direction of the user. They are fully integrated into the monitor's flat, nearly frameless design to offer an excellent user experience.

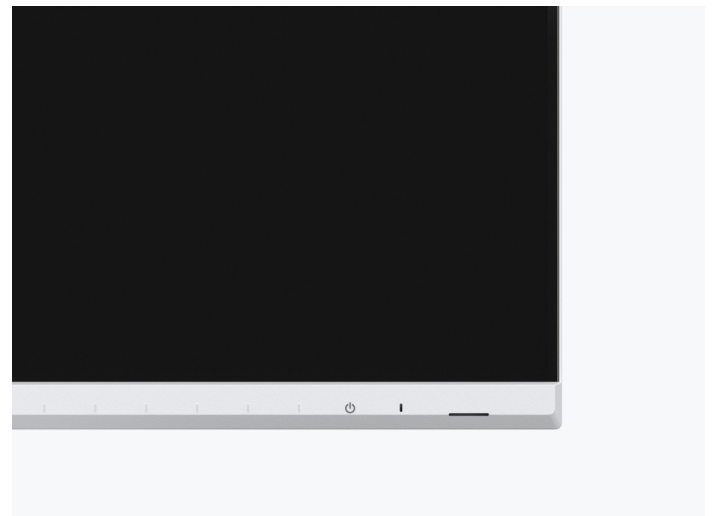


Image quality

Precise, high-contrast, bright and crisp screen

Maximum image quality thanks to the IPS panel

The monitor is capable of all three key elements of excellent image quality: excellent resolution of 1920 x 1200 pixels, maximum contrast of 1000:1, and stable brightness of up to 250 cd/m². That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.




Precise color control

An image can only be perfect if the colours are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the colour information to be assigned much more precisely than with conventional 8-bit LUTs. The finest colour gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10 000 K in 500-K intervals.



Look-Up-Table with 10 and more bit

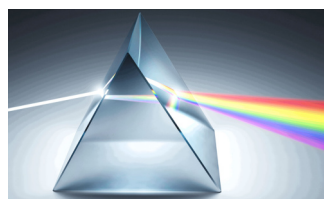

Look-Up-Table with 8 bit

Overdrive to quickly change images

Fast, faster, overdrive. The overdrive function accelerates switching time so that the gray-gray change takes only 5 ms on average. You can watch films and rapidly changing images without annoying afterglow.

Ergonomics

Working in a relaxed manner


Save electricity and your eyes with Auto EcoView

At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and darkest environment over the course of the day with the respectively desired screen brightness. Another advantage: Thanks to the automatic brightness adjustment, you will save up to 50% of your electricity costs in comparison to a monitor that is permanently operated at maximum brightness.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how environmentally friendly and economical your settings are.



During the day

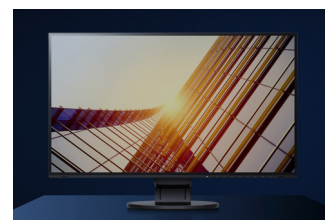

In the evening

FOR THE SAKE OF THE EYES

Flicker free

To help protect your eyes, EIZO has developed a hybrid technology to control the backlight. This combines the benefits of the otherwise standard PWM (pulse width modulation) and DC (direct current) control. The PWM control uses much higher frequencies than standard PWM methods. The result: a flicker-free viewing experience while maintaining picture quality and colour stability. In addition, compared to pure DC control, you can adjust the brightness to less than 1% of the maximum value in darkly lit rooms. The benefit: Your screen remains free from glare even under these conditions.

The flicker-free and low blue light content of the EIZO FlexScan monitors is certified by TÜV Rheinland.

Anti-glare coating: more image, less reflection


The EV2360 offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the EV2360 effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.




Ergonomic stand

Our screens offer continuous height adjustment. Depending on the model, they can even be lowered to the base plate of the stand. This guarantees the best possible ergonomics, regardless of whether the user is sitting or standing in front of the screen. You can also swivel, rotate and tilt the monitor base to the position that is most comfortable for your posture.


The EV2360 can also be rotated into the portrait format, which is a great advantage for tethered shoots of people in the portrait mode, for example.

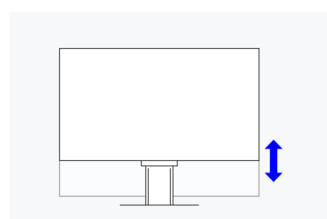


Height
140 mm

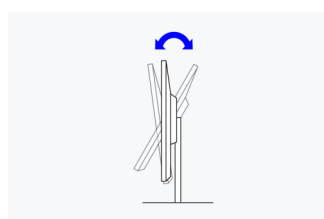

Tilt
Between 5° forwards and 35° backwards

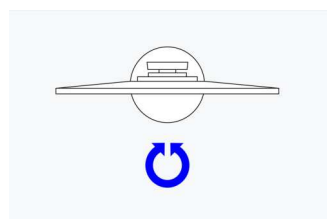

Swivel
344°

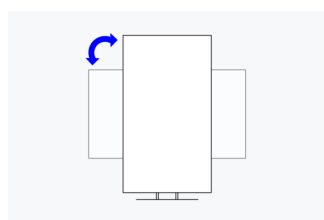

Rotation
clockwise and anti-clockwise

Variety of ports Best connectivity

One monitor, many ports


It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.



Software and ease of use Features for greater comfort


Preset color modes: optimized display at the touch of a button

Pre-set color modes optimise the viewing of images, texts or films. Because it makes a difference whether you are watching a film, editing a picture, surfing the net, or writing texts. At the touch of a button, you set the respective pre-set for brightness, gamma correction and colour temperature. For example, the Paper mode simulates the pleasant contrast of printed paper, which is easy on the eyes when reading and prevents fatigue.

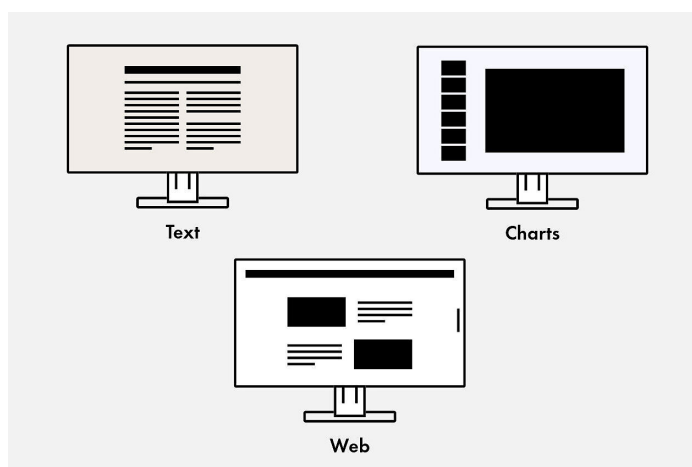

Operation made easy thanks to the Button Guide

With the Button Guide, you have all functions at a glance. One touch of the control panel is enough, and the function assignment of the buttons is displayed. Your advantage: clarity of operation and a clean, uncluttered design.

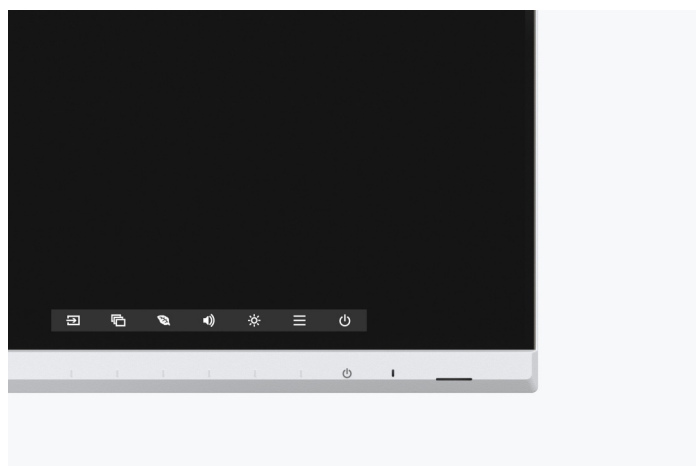

MONITORSTEUERUNG UND ADMINISTRATION

Screen InStyle


In addition to the on-screen menu, you can conveniently control the EV2360 by using the [Screen InStyle](#) software on a PC. The configuration options include color reproduction, energy saving options, and ergonomic functions. In multi-screen systems, the settings can be applied synchronously to all connected screens with Screen InStyle.

System administrators can centrally manage and control monitors connected in the network with Screen InStyle installed using the [Screen InStyle Server](#) application. This optimises power consumption and simplifies asset management of the monitors.

COMPANY-WIDE DEFAULT SETUP

Monitor Configurator

Workload reduction for administrators: The software allows you to create a default setup for all relevant monitor settings. This setup can be distributed to the connected monitors via the local network which facilitates the roll-out process.

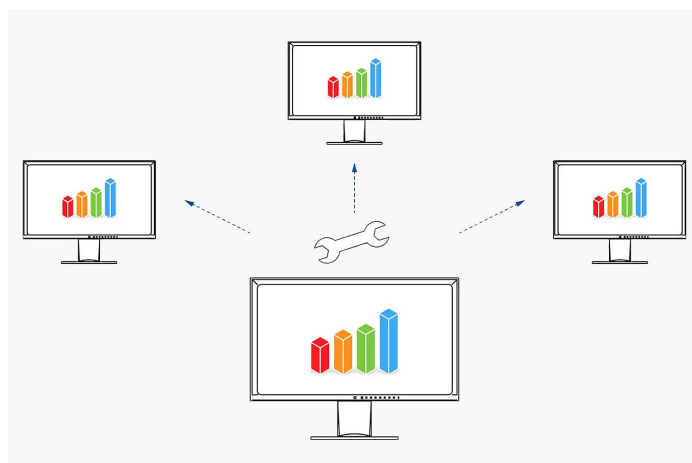

Sustainability

Environmentally and socially conscious production

ECOVIEW OPTIMIZER

Save up to 30% of energy

Save electricity without compromising quality: The EcoView Optimizer reduces the background lighting fully automatically for dark images. This reduces electricity consumption by up to 30%. At the same time, the signal is amplified and the color tone values adjusted. The result: You will enjoy the image quality you are used to but consume less power.



Zero-watt consumption thanks to the power switch

The monitors have an integrated mechanical power switch, which is extremely practical and energy-saving: If you switch off the monitor using the power switch, the device will stop consuming any power at all. Moreover, it consumes a maximum of 0.5 watt in standby mode.

Socially responsible production

The EV2360 is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.




Environmentally and climate friendly

Each EV2360 is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



Sustainable and durable

The EV2360 is designed for a long service life that takes into account the entire lifecycle and impact on the environment. It is generally well above the five-year guarantee. Spare parts are available up to five years after the end of production. The monitor's long service life and the ability to repair it save resources and the climate. When designing the EV2360 we paid attention to reducing resource consumption by using high-quality components and materials and being meticulous in production.

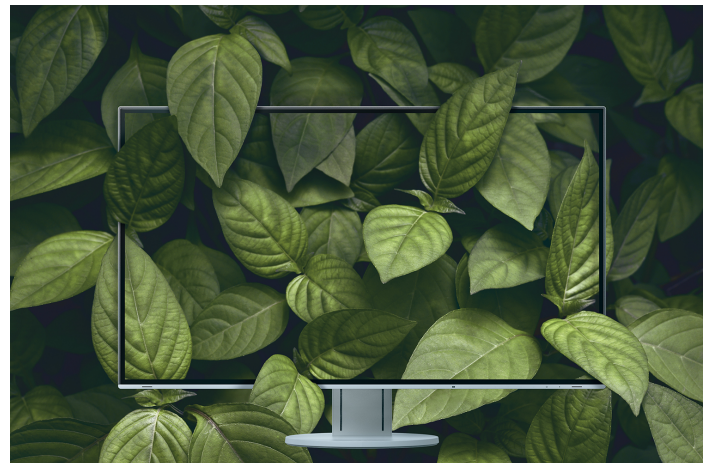

A natural beauty

Reducing the use of volatile organic compounds (VOCs) found in material production, such as some paints, is a global concern.

Through years of research, EIZO has succeeded in achieving a smooth, nearly homogeneous color and texture in its monitor housings without the use of varnish.



Compliance with standards and guidelines

The monitor is certified according to important and all-encompassing sustainability standards such as TCO Certified Generation 9, EPEAT and ENERGY STAR®. The EV2360 is a safe investment, when taking into account issues such as ESG (Environmental, social and corporate governance) or SDG (Sustainable Development Goals) from the United Nations and following the necessary guidelines.



Warranty

Highest investment security

Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.



Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	EV2360-BK EV2360-WT	Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie, DICOM
Case color	Black White	DICOM tone curve	✓
Areas of application	Office	Auto EcoView	✓
Product line	FlexScan	EcoView Index	✓
Areas of application	Large and medium-sized companies, Private user & small business, Finance	EcoView Optimizer	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	Overdrive	✓
EAN	4995047055198 4995047055204	No flickering	✓
		HDCP Decoder	✓
		Automatic signal input recognition	✓
		Built-in speakers	✓
		On-screen menu languages	de, en, fr, es, it, se
		Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Overdrive, Colour tone, Color saturation, Resolution, Scaling, OSD language, Signal input, All EcoView functions, Volume
		Button Guide	✓
		Integrated power unit	✓
SCREEN		ELECTRICAL DATA	
Screen size [in inches]	22.5	Frequency	Display Port: 31-75.5 kHz/59-61 Hz; HDMI: 15-75.5 kHz/49-61 Hz, 59-61 Hz; D-Sub: 31-75.5 kHz/59-61 Hz
Screen size [in cm]	57.2	Power consumption (typical) [in watts]	11
Format	16:10	Maximum Power Consumption [in watts]	37 (at maximum brightness with all signal inputs and USB ports in use)
Viewable image size (width x height) [in mm]	488.2 x 297.2	Max. Power consumption in stand-by mode [in watts]	0.5
Ideal and recommended resolution	1920 x 1200	Power consumption with power switch off [in watts]	0
Pixel pitch [in mm]	0.254 x 0.254	Energy efficiency class	C
Pixel density [in ppi]	101	Energy consumption/1000h [in kWh]	11
Supported resolutions	1920 x 1200, 1920 x 1080 (Full HD), 1680 x 1050, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480	Power supply	AC 100-120 V / 200-240 V, 50/60 Hz
Panel technology	IPS	Power management	✓
Max. viewing angle horizontal	178	DIMENSIONS & WEIGHT	
Max. viewing angle vertical	178	Dimensions (incl. stand) (width x height x depth) [in mm]	499 x 334-474 x 233
Number of colors or greyscale	16.7 million colors (D-Sub, 8 Bit), 16.7 million colors (DVI, 8 Bit), 16.7 million colors (DisplayPort, 8 Bit), 16.7 million colors (HDMI, 8 Bit)	Weight (incl. stand) [in kg]	5.5
Color palette/look-up table	1.06 billion color tones / 10 Bit	Dimensions (without stand) (width x height x depth) [in mm]	499 x 321 x 54
Max. color space (typical)	sRGB (100%)	Weight (without stand) [in kg]	3.4
Max. brightness (typical) [in cd/m²]	250	Dimension drawing (PDF)	Dimension drawing (PDF)
Max. dark room contrast (typical)	1000:1	Rotatability of the stand [in °]	344
Response time grey-grey alternation (typical) [in ms]	5	Tiltability forwards/backwards [in °]	5 / 35
Backlight	LED	Pivot between portrait / landscape	clockwise and anti-clockwise
CONNECTIONS		Height adjustment range [in mm]	140
Signal inputs	D-Sub, DisplayPort (HDCP 1.3), HDMI (HDCP 1.4)	Hole spacing	100 x 100
USB specification	USB 5Gbps (USB 3)		
USB upstream ports	1 x type B		
USB downstream ports	2x type A		
Graphic signal	RGB Analog, DisplayPort, HDMI (RGB, YUV)		
Sync formats	Separate		
Audio input	3.5 mm stereo jack, DisplayPort, HDMI		
Audio / headphone output	3.5 mm stereo jack		

CERTIFICATION & STANDARDS

Certification	CE, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TCO Certified Generation 9, EPEAT 2018 (US), TÜV/Blue Low Light Content, TÜV/Flicker Free, RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC, BIS, BSMI, EAC
---------------	--

SOFTWARE & ACCESSORIES

Accompanying software and other accessories are available for download	Screen InStyle
Other box contents	USB cable (Type A - Type B), Signal cable DisplayPort - DisplayPort, Manual via download, Power cord, Quick guide
Accessories	PM200-K, CP200, HH200PR-K, PCSK-03

WARRANTY

Warranty periode	5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Included warranty	Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.



**Experience the
EV2360 in AR now!**

Find your EIZO contact:
EIZO Europe GmbH
Belgrader Straße 2
41069 Mönchengladbach
Phone: +49 2161 8210-0
www.eizo.eu

All product names are trademarks or registered trademarks of EIZO Corporation in Japan and other countries or their respective companies. Copyright © 2024 EIZO Europe GmbH, Belgrader Str. 2, 41069 Mönchengladbach, Germany. All rights, errors and modifications reserved. Latest update: 30.04.2024