



[→ Product Website](#)

[→ Experience in AR](#)

For state-of-the-art connectivity, the EIZO FlexScan EV2485 uses USB-C upstream, DisplayPort and HDMI inputs as well as four USB downstream ports. The 24-inch display in 16:10 format receives image signals, audio and USB data via its USB-C interface and supplies connected devices with power via USB. This convenient multi-purpose connectivity simplifies quick laptop connection when switching between workstations or hybrid working. The EV2485 is energy-efficient, ergonomic and reliable, with impressive picture quality. It has a virtually frameless design for a refined aesthetic. The housing is available in elegant black or white. Matching cables are available in the respective housing colour. Operating controls, the brightness sensor and speakers are integrated into the narrow front panel. The EV2485 can be rotated, swivelled and tilted in a way that is most comfortable for the users back, neck and preferred sitting position. The EV2485's IPS LCD has a resolution of 1920x1200 pixels and allows for the widest viewing angles. The maximum brightness typical of the model is 350 cd/m2. Anti-reflective coating and Auto-EcoView brightness control create a glarefree view, while sophisticated hybrid control of the LCD backlight ensures flicker-free viewing.

- ✓ 24" monitor with 16:10 aspect ratio and IPS technology for outstanding image quality
- ✓ USB-C port with DisplayPort signal channel and 70-watt power supply (max.) for the perfect connection
- ✓ Bezel only 1 mm: amazingly compact and ultra-elegant design
- ✓ Flicker-free image reproduction thanks to hybrid brightness control
- ✓ Auto EcoView and EcoView Optimizer delivers maximum power savings and superb ergonomics
- ✓ Optimised antireflection properties and flexible positioning
- ✓ USB 3.1 hub with one USB-C upstream and four USB-A downstream ports
- ✓ Signal inputs: USB-C (DisplayPort Alt Mode), DisplayPort, HDMI
- ✓ Proven manufacturing process that is both environmentally friendly and socially responsible
- ✓ 5-year warranty for highest investment security


Variety of ports

Best connectivity

Cutting-edge connectivity with USB-C

A single USB-C cable is all that is needed to provide video and audio reproduction, transfer data quickly and supply power to the connected devices. The 70 W power supply via USB-C is highly practical and can reliably charge small computers or laptops. This creates more space on your desk since you no longer need an additional power supply for your computer.

For information on compatibility between PCs and FlexScan monitors when using a USB-C connection, [please visit the EIZO Global website](#).

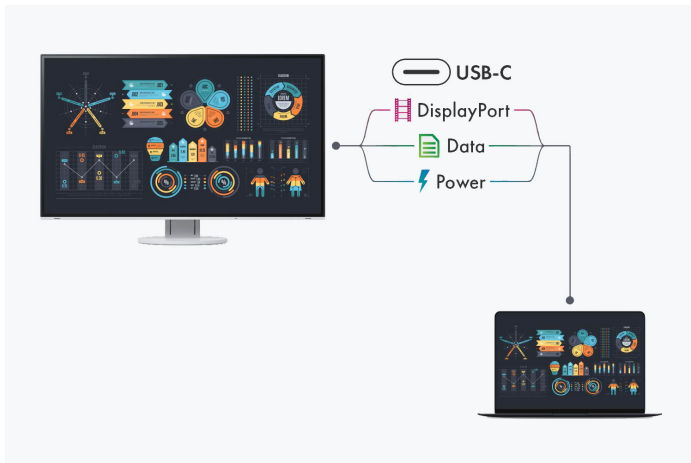

One monitor, many ports

It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.



Design

A pleasing sight on any desk

Elegant design

The monitor's appearance can be the key to creating a pleasant working atmosphere. Whether you are at home or in the office, the monitor's virtually frameless design and ergonomic functionality allows it to fit naturally into your workplace environment. The housing is available in both an elegant black and in white, with matching white cables.

Incidentally, the EV2485 is an ideal match for daisy-chain multi-screen systems with its sister model, the [EV2495](#). The housing design and stand are identical.



Controls integrated into bezel

Electrostatic switches are integrated into the front of the EV2485 instead of mechanical buttons. This ensures ease of use while also giving the monitor an extremely elegant look. The speakers and all the controls are also built into the bezel, pointing forward in the direction of the user. They are fully integrated into the monitor's flat, nearly frameless design to offer an excellent user experience.


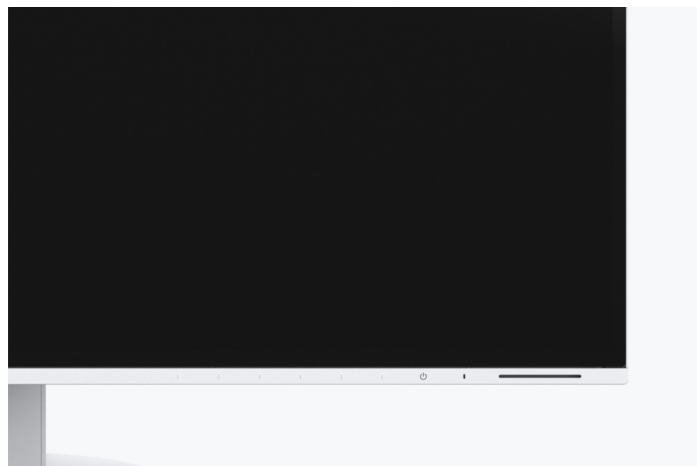


Image quality

Precise, high-contrast, bright and crisp screen


Maximum image quality thanks to the IPS panel

The monitor is capable of all three key elements of excellent image quality: excellent resolution of 1920 x 1200 pixels, maximum contrast of 1000:1, and stable brightness of up to 350 cd/m². That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.

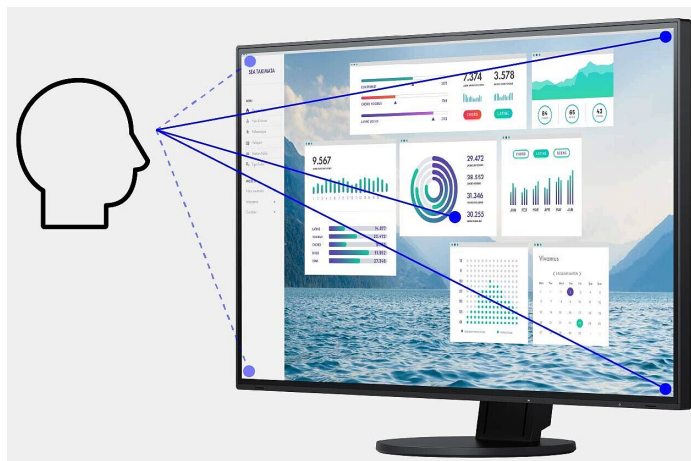


Precise color control

An image can only be perfect if the colours are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the colour information to be assigned much more precisely than with conventional 8-bit LUTs. The finest colour gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10 000 K in 500-K intervals.

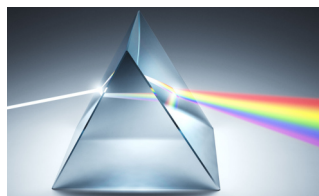

Look-Up-Table with 10 and more bit

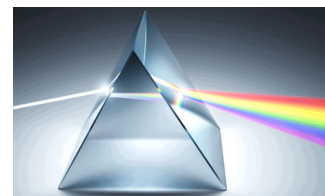

Look-Up-Table with 8 bit

Overdrive to quickly change images

Fast, faster, overdrive. The overdrive function accelerates switching time so that the gray-gray change takes only 5 ms on average. You can watch films and rapidly changing images without annoying afterglow.

Ergonomics

Working in a relaxed manner


Save electricity and your eyes with Auto EcoView

At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and darkest environment over the course of the day with the respectively desired screen brightness. Another advantage: Thanks to the automatic brightness adjustment, you will save up to 50% of your electricity costs in comparison to a monitor that is permanently operated at maximum brightness.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how environmentally friendly and economical your settings are.



During the day

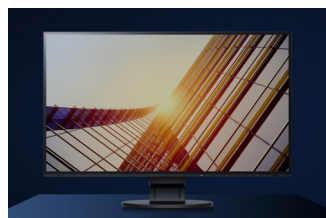

In the evening

FOR THE SAKE OF THE EYES


Flicker free

To help protect your eyes, EIZO has developed a hybrid technology to control the backlight. This combines the benefits of the otherwise standard PWM (pulse width modulation) and DC (direct current) control. The PWM control uses much higher frequencies than standard PWM methods. The result: a flicker-free viewing experience while maintaining picture quality and colour stability. In addition, compared to pure DC control, you can adjust the brightness to less than 1% of the maximum value in darkly lit rooms. The benefit: Your screen remains free from glare even under these conditions.

The flicker-free and low blue light content of the EIZO FlexScan monitors is certified by TÜV Rheinland.


Anti-glare coating: more image, less reflection

The EV2485 offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the EV2485 effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.

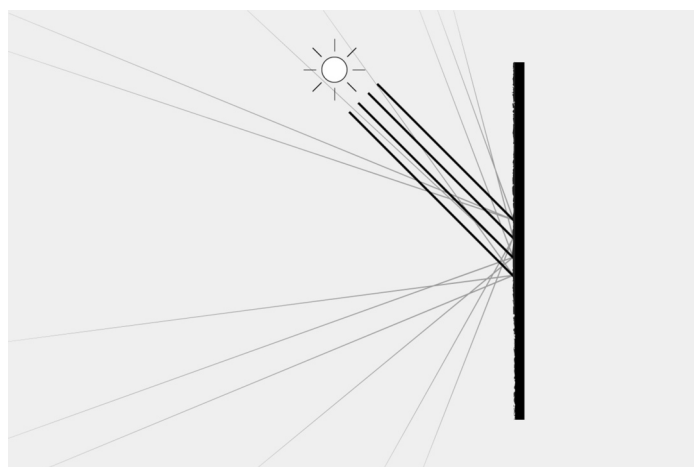


Ergonomic stand


Ergonomic and stable: the adjustable stand focuses on ergonomics. You can rotate, swivel and tilt the monitor stand until you find the most comfortable setting for your back, neck and sitting posture. It features continuous height adjustment and can be lowered almost to the base plate of the stand, enabling you to position the top image line ergonomically right below your eye level.

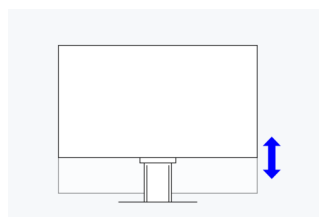


Height
182.2 mm

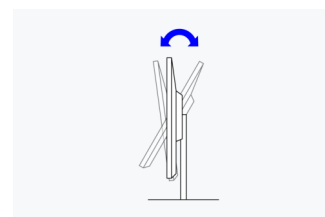

Tilt
Between 5° forwards and 35° backwards

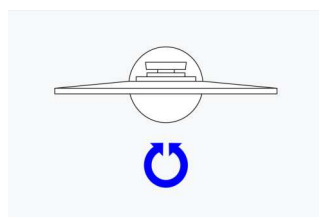

Swivel
344°

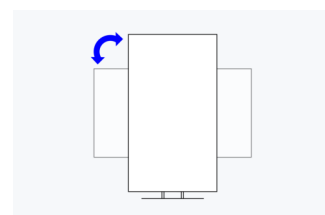


Rotation
clockwise and anti-clockwise

Software and ease of use

Features for greater comfort


Preset color modes: optimized display at the touch of a button

Pre-set color modes optimise the viewing of images, texts or films. Because it makes a difference whether you are watching a film, editing a picture, surfing the net, or writing texts. At the touch of a button, you set the respective pre-set for brightness, gamma correction and colour temperature. For example, the Paper mode simulates the pleasant contrast of printed paper, which is easy on the eyes when reading and prevents fatigue.

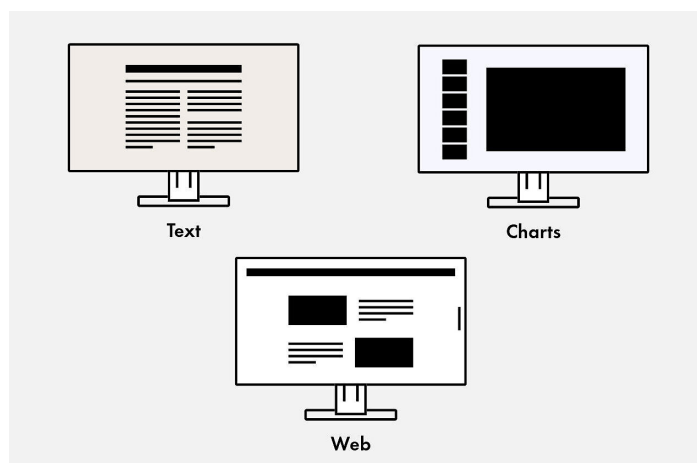

Operation made easy thanks to the Button Guide

With the Button Guide, you have all functions at a glance. One touch of the control panel is enough, and the function assignment of the buttons is displayed. Your advantage: clarity of operation and a clean, uncluttered design.

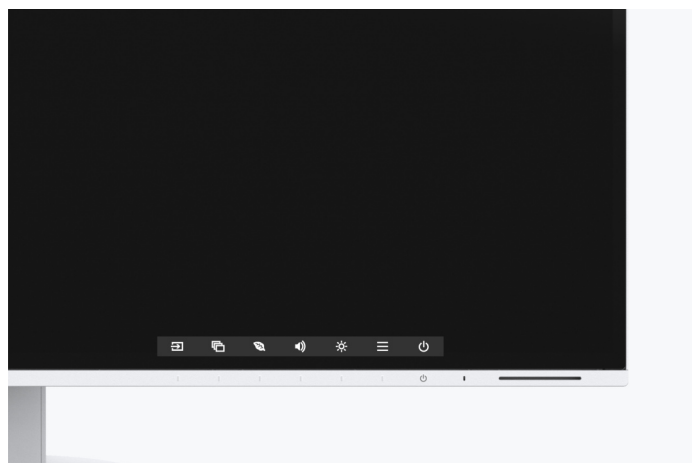

MONITOR CONTROL AND ADMINISTRATION

Screen InStyle


In addition to the on-screen menu, you can conveniently control the EV2485 by using the [Screen InStyle](#) software on a PC. The configuration options include color reproduction, energy saving options, and ergonomic functions. In multi-screen systems, the settings can be applied synchronously to all connected screens with Screen InStyle.

System administrators can centrally manage and control monitors connected in the network with Screen InStyle installed using the [Screen InStyle Server](#) application. This optimises power consumption and simplifies asset management of the monitors.

COMPANY-WIDE DEFAULT SETUP

Monitor Configurator

Workload reduction for administrators: The software allows you to create a default setup for all relevant monitor settings. This setup can be distributed to the connected monitors via the local network which facilitates the roll-out process.

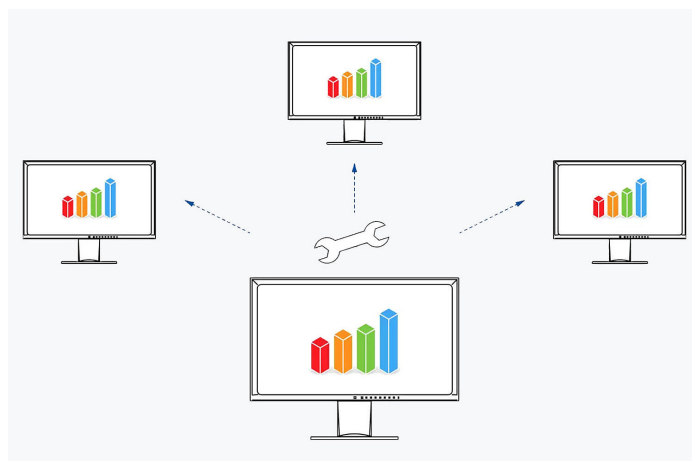

Sustainability

Environmentally and socially conscious production

ECOVIEW OPTIMIZER

Save up to 30% of energy

Save electricity without compromising quality: The Eco-View Optimizer reduces the background lighting fully automatically for dark images. This reduces electricity consumption by up to 30%. At the same time, the signal is amplified and the color tone values adjusted. The result: You will enjoy the image quality you are used to but consume less power.



Zero-watt consumption thanks to the power switch

The monitors have an integrated mechanical power switch, which is extremely practical and energy-saving: If you switch off the monitor using the power switch, the device will stop consuming any power at all. Moreover, it consumes a maximum of 0.5 watt in standby mode.

Socially responsible production

The EV2485 is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along

the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.



Environmentally and climate friendly

Each EV2485 is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



Sustainable and durable

The EV2485 is designed for a long service life that takes into account the entire lifecycle and impact on the environment. It is generally well above the five-year guarantee. Spare parts are available up to five years after the end of production. The monitor's long service life and the ability to repair it save resources and the climate. When designing the EV2485 we paid attention to reducing resource consumption by using high-quality components and materials and being meticulous in production.



A natural beauty

Reducing the use of volatile organic compounds (VOCs) found in material production, such as some paints, is a global concern.

Through years of research, EIZO has succeeded in achieving a smooth, nearly homogeneous color and texture in its monitor housings without the use of varnish.



Environmentally friendly packaging

For the packaging of the EV2485, EIZO uses a padding made of moulded pulp cellulose. The material is made from recycled cardboard and paper and has a much lower environmental impact when disposed of than traditional polystyrene or plastic. All cables are stored in a cardboard compartment instead of being individually packed in plastic bags.



Collective packaging on demand

Depending on the quantity and delivery time, EIZO offers an alternative packaging option with four monitors and four separate stands in one shipping unit each.

This reduces packaging waste, increases shipping efficiency and shortens unpacking and installation time.



Space-saving collective packaging: 1) monitors, 2) stands

Compliance with standards and guidelines

The monitor is certified to important and comprehensive sustainability standards such as TCO Certified Generation 9 and ENERGY STAR®. It also has an EPEAT Gold registration for compliance with strict sustainability standards at the highest level, which is even complemented by a Climate + award on science-based climate protection standards.

The EV2485 represents a safe investment if aspects such as ESG (environmental, social and corporate governance) or SDG (Sustainable Development Goals) of the United Nations are to be observed and required guidelines are to be complied with.



Warranty

Highest investment security

Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.

Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	EV2485-BK EV2485-WT	USB-C docking	✓
Case color	Black White	Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie, DICOM
Areas of application	Office	DICOM tone curve	✓
Product line	FlexScan	Auto EcoView	✓
Areas of application	Large and medium-sized companies, Private user & small business, Home Office, CAD, Finance, Control rooms, Hospital administration	EcoView Index	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	EcoView Optimizer	✓
EAN	4995047062561 4995047062578	Overdrive	✓
SCREEN		No flickering	✓
Screen size [in inches]	24.1	HDCP Decoder	✓
Screen size [in cm]	61.1	Automatic signal input recognition	✓
Format	16:10	Built-in speakers	✓
Viewable image size (width x height) [in mm]	518 x 324	On-screen menu languages	de, en, fr, es, it, se
Ideal and recommended resolution	1920 x 1200	Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Overdrive, Colour tone, Color saturation, Resolution, Scaling, OSD language, Signal input, All EcoView functions, Volume
Pixel pitch [in mm]	0.270 x 0.270	Button Guide	✓
Pixel density [in ppi]	94	Integrated power unit	✓
Supported resolutions	1920 x 1200, 1680 x 1050, 1600 x 1200, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480	ELECTRICAL DATA	
Panel technology	IPS	Frequency	USB-C: 31-76 kHz/59-61 Hz, DisplayPort: 31-76 kHz/59-61 Hz, HDMI: 31-76 kHz/ 49-51 Hz/49-61 Hz
Max. viewing angle horizontal	178	Power consumption (typical) [in watts]	11
Max. viewing angle vertical	178	Maximum Power Consumption [in watts]	146 (at maximum brightness with all signal inputs and USB ports in use)
Number of colors or greyscale	16.7 million colors (DisplayPort, 8 Bit), 16.7 million colors (HDMI, 8 Bit), 16.7 million colors (USB-C, 8 Bit)	Max. Power consumption in stand-by mode [in watts]	0.5
Color palette/look-up table	1.06 billion color tones / 10 Bit	Power consumption with power switch off [in watts]	0
Max. color space (typical)	sRGB	Energy efficiency class	C
Max. brightness (typical) [in cd/m ²]	350	Energy consumption/1000h [in kWh]	12
Max. dark room contrast (typical)	1000:1	Power supply	AC 100-120 V / 200-240 V, 50/60 Hz
Response time grey-grey alternation (typical) [in ms]	5	Max. USB-C Power Delivery [in Watt]	70
Backlight	LED	Power management	✓
CONNECTIONS			
Signal inputs	USB-C (DisplayPort Alt Mode, HDCP 1.3), DisplayPort (HDCP 1.3), HDMI (HDCP 1.4)		
USB specification	USB 5Gbps (USB 3)		
USB upstream ports	1 x type C (DisplayPort Alt Mode, 70 W max.)		
USB downstream ports	4x type A		
Graphic signal	USB-C, DisplayPort, HDMI (RGB, YUV)		
Audio input	USB-C, DisplayPort, HDMI		
Audio / headphone output	3.5 mm stereo jack		

DIMENSIONS & WEIGHT

Dimensions (incl. stand) (width x height x depth) [in mm]	531 x (356 - 538) x 230
Weight (incl. stand) [in kg]	7.6
Dimensions (without stand) (width x height x depth) [in mm]	531 x 344 x 54
Weight (without stand) [in kg]	4.9
Dimension drawing (PDF)	Dimension drawing (PDF)
Rotatability of the stand [in °]	344
Tiltability forwards/backwards [in °]	5 / 35
Pivot between portrait / landscape	clockwise and anti-clockwise
Height adjustment range [in mm]	182.2
Hole spacing	100 x 100

CERTIFICATION & STANDARDS

Certification	CE, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TCO Certified Generation 9, EPEAT 2018 (US), TÜV/Blue Low Light Content, TÜV/Flicker Free, RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC, EAC
EPEAT	EPEAT 2018 Gold (US), EPEAT Climate +

SOFTWARE & ACCESSORIES

Accompanying software and other accessories are available for download	Screen InStyle
Other box contents	USB/signal cable (USB-C - USB-C), Manual via download, Power cord, Quick guide
Accessories	PM200-K, CP200, HH200PR-K, CC100, PP100-K, PP200-K, PCSK-03

WARRANTY

Warranty periode	5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Warranty type	Swiss Edition Warranty
Included warranty	Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.



**Experience the
EV2485 in AR now!**

Find your EIZO contact:
EIZO AG - Switzerland
Moosacherstrasse 6, Au
8820 Wädenswil ZH
Phone +41 44 782 24 40
www.eizo.ch

All product names are trademarks or registered trademarks of EIZO Corporation in Japan and other countries or their respective companies. Copyright © 2024 EIZO Europe GmbH, Belgrader Str. 2, 41069 Mönchengladbach, Germany. All rights, errors and modifications reserved. Latest update: 06.05.2024