

[→ Product Website](#)

The sharp picture quality as well as the convenience and versatility of USB-C help make the FlexScan EV2785 the ideal display for professional office and CAD applications. It delivers top-rate display quality and crystal clear images and texts thanks to Ultra HD resolution of 3840 x 2160 and a pixel density of 163 ppi. The monitor's USB-C port is able to transmit video, audio, and USB signals concurrently with a maximum bandwidth of 5 Gbps. The display can also supply up to 60 W to power to other devices. This allows you to conveniently charge your notebook or tablet, eliminating the need for a separate power cord. The new monitor looks great thanks to its modern, virtually frameless design. The bezels are just 1 mm on the sides and top and 5.8 mm on the bottom of the screen, making it well suited for multi-monitor solutions.



- ✓ 27" UHD 4K monitor with a large display and super fine resolution of 163 ppi
- ✓ Docking functionality for tablets, notebooks, and smartphones made possible by the USB-C 3.1 port with the DisplayPort signal channel and max. 60 W power supply
- ✓ 1 mm bezels: ultra-compact and ultra-sleek design
- ✓ Cabinet comes in either black or white
- ✓ 1300:1 contrast ratio, brightness: 350 cd/m<sup>2</sup>, 178° viewing angle
- ✓ Auto EcoView, EcoView Index, and EcoView Optimizer for maximum power savings and superb ergonomics
- ✓ USB Type-C (DisplayPort Alt Mode), DisplayPort, 2 x HDMI
- ✓ 5-year warranty for highest investment security

## Image quality

### Precise, high-contrast, bright and crisp screen

#### 4K resolution for ultra-sharp texts and images

Be it CAD, office, or video applications, the FlexScan EV2785 with its 4K ultra HD resolution supports your work with its extraordinary display quality. Thanks to a native resolution of 3840 x 2160 (4K UHD) pixels and 163 ppi (pixels per inch), the 27 monitor presents texts and graphics clearer and more precisely than ever before.

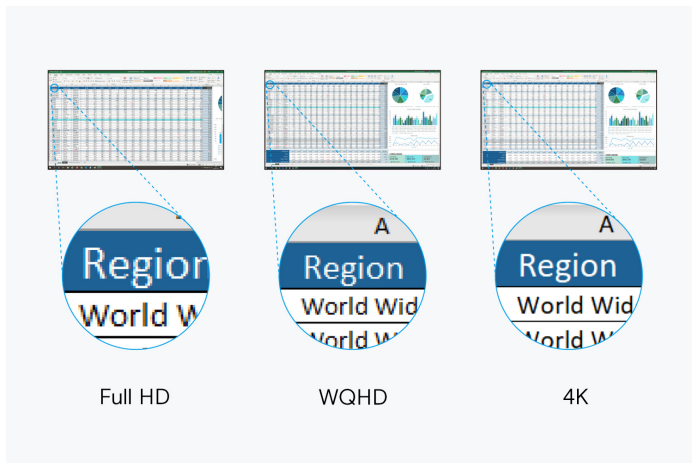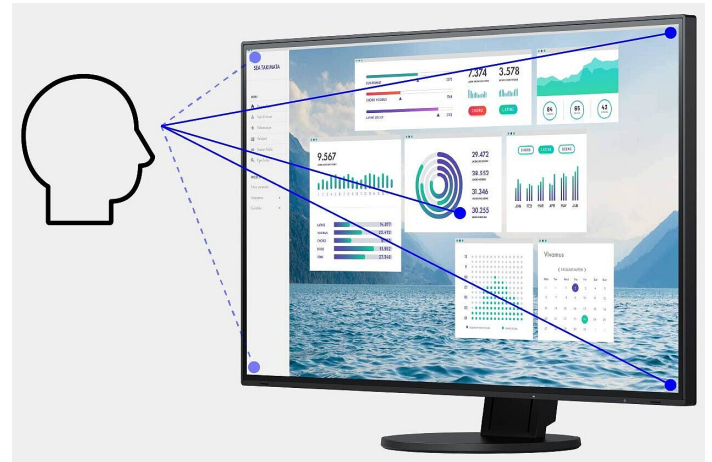


#### Maximum image quality thanks to the IPS panel


The monitor is capable of all three key elements of excellent image quality: excellent resolution of 3840 x 2160 (4K UHD) pixels, maximum contrast of 1300:1, and stable brightness of up to 350 cd/m<sup>2</sup>. That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.

#### Precise color control

An image can only be perfect if the colours are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the colour information to be assigned much more precisely than with conventional 8-bit LUTs. The finest colour gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10 000 K in 500-K intervals.

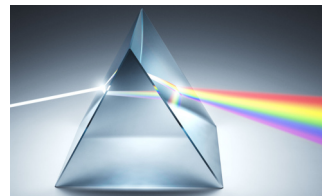

Look-Up-Table with 10 and more bit

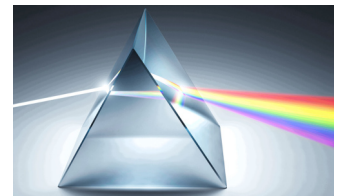

Look-Up-Table with 8 bit

#### Overdrive to quickly change images

Fast, faster, overdrive. The overdrive function accelerates switching time so that the gray-gray change takes only 5 ms on average. You can watch films and rapidly changing images without annoying afterglow.


## Variety of ports

### Best connectivity

#### Cutting-edge connectivity with USB-C

A single USB-C cable is all that is needed to provide video and audio reproduction, transfer data quickly and supply power to the connected devices. The 60 W power supply via USB-C is highly practical and can reliably charge small computers or laptops. This creates more space on your desk since you no longer need an additional power supply for your computer.

The monitor is compatible with the following USB-C devices.

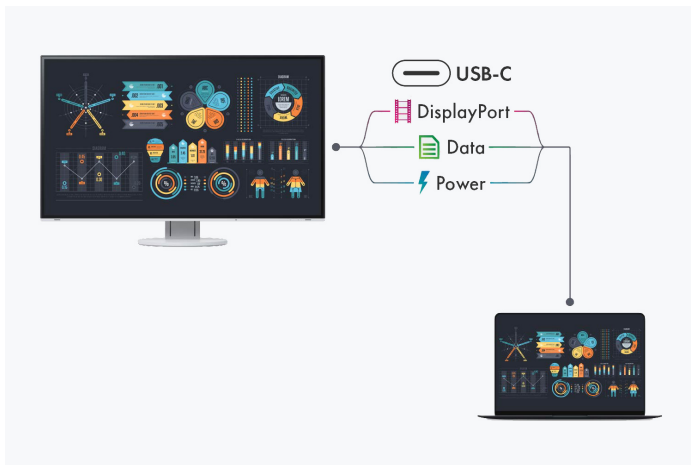

#### One monitor, many ports

It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.



## Design

### A pleasing sight on any desk


#### Elegant design

The monitor's appearance can be the key to creating a pleasant working atmosphere. Whether you are at home or in the office, the monitor's virtually frameless design and ergonomic functionality allows it to fit naturally into your workplace environment. The housing is available in both an elegant black and in white, with matching white cables.



## Controls integrated into bezel

Electrostatic switches are integrated into the front of the EV2785 instead of mechanical buttons. This ensures ease of use while also giving the monitor an extremely elegant look. The speakers and all the controls are also built into the bezel, pointing forward in the direction of the user. They are fully integrated into the monitor's flat, nearly frameless design to offer an excellent user experience.

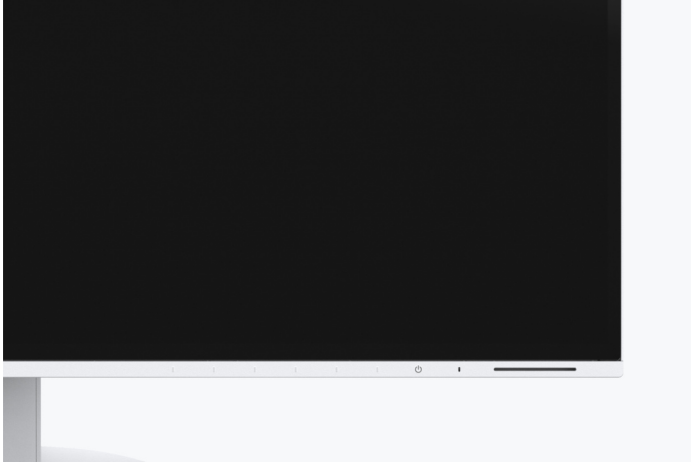


## Software and ease of use Features for greater comfort

### Preset color modes: optimized display at the touch of a button


Pre-set color modes optimise the viewing of images, texts or films. Because it makes a difference whether you are watching a film, editing a picture, surfing the net, or writing texts. At the touch of a button, you set the respective pre-set for brightness, gamma correction and colour temperature. For example, the Paper mode

simulates the pleasant contrast of printed paper, which is easy on the eyes when reading and prevents fatigue.

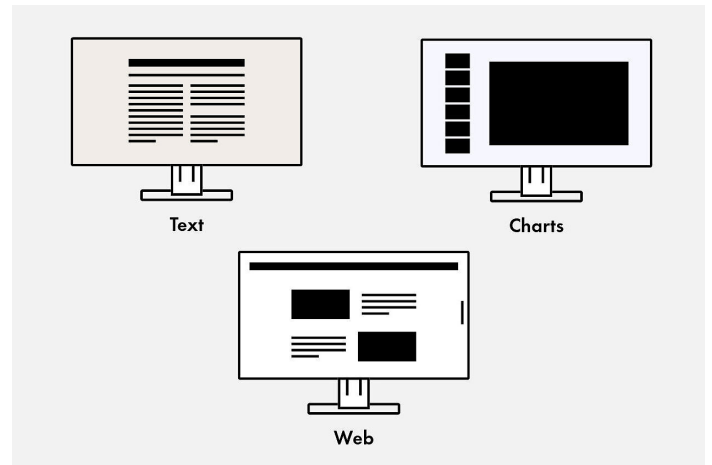

### Operation made easy thanks to the Button Guide


With the Button Guide, you have all functions at a glance. One touch of the control panel is enough, and the function assignment of the buttons is displayed. Your advantage: clarity of operation and a clean, uncluttered design.

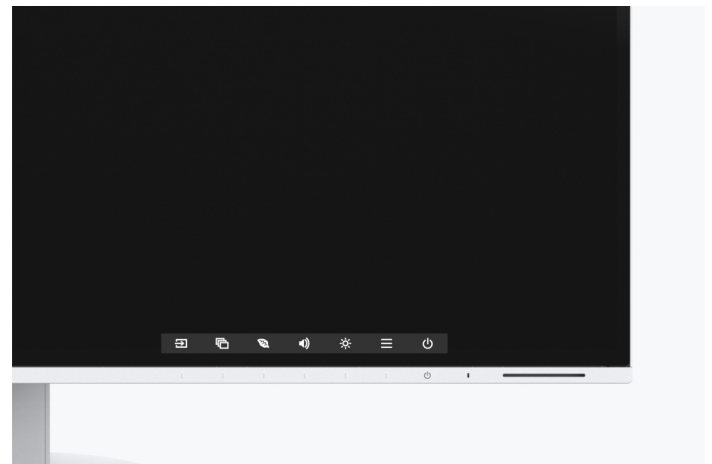


## Picture-by-picture: everything at a glance

The Picture-by-Picture mode allows you to display different signal sources on one screen. You can select which signal is to be displayed on the right or left half of the screen.

Use the Picture-by-Picture mode, for example, if you want to connect two computers to one monitor, or if you want to replace two individual screens connected to one computer.

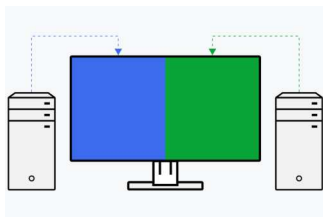

With Picture-by-Picture

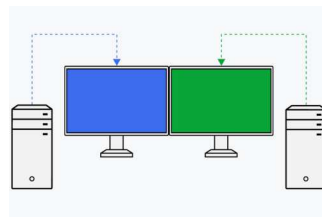

Without Picture-by-Picture

### MONITOR CONTROL AND ADMINISTRATION

## Screen InStyle

In addition to the on-screen menu, you can conveniently control the EV2785 by using the [Screen InStyle](#) software on a PC. The configuration options include color reproduction, energy saving options, and ergonomic functions. In multi-screen systems, the settings can be applied synchronously to all connected screens with Screen InStyle.


System administrators can centrally manage and control monitors connected in the network with Screen InStyle installed using the [Screen InStyle Server](#) application.

This optimises power consumption and simplifies asset management of the monitors.

### COMPANY-WIDE DEFAULT SETUP

## Monitor Configurator

Workload reduction for administrators: The software allows you to create a default setup for all relevant monitor settings. This setup can be distributed to the connected monitors via the local network which facilitates the roll-out process.

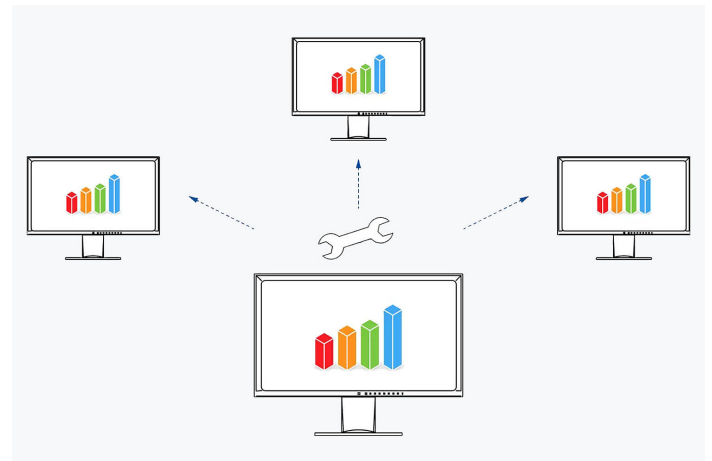

## Ergonomics

## Working in a relaxed manner


### Save electricity and your eyes with Auto EcoView

At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and darkest environment over the course of the day with the respectively desired screen brightness. Another advantage: Thanks to the automatic brightness adjustment, you will save up to 50% of your electricity costs in comparison to a monitor that is permanently operated at maximum brightness.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how environmentally friendly and economical your settings are.




During the day

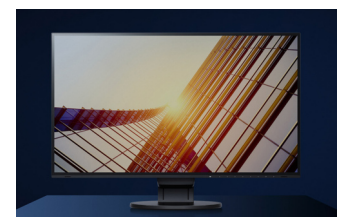

In the evening

## Anti-glare coating: more image, less reflection

The EV2785 offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the EV2785 effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.

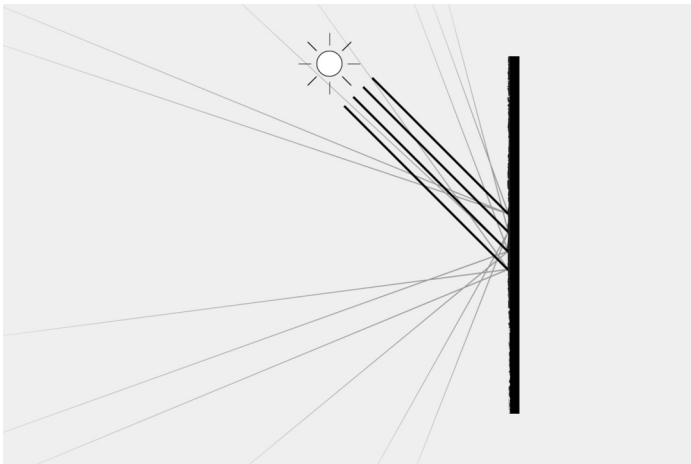

### FOR THE SAKE OF THE EYES

## Flicker free


To help protect your eyes, EIZO has developed a hybrid technology to control the backlight. This combines the benefits of the otherwise standard PWM (pulse width modulation) and DC (direct current) control. The PWM control uses much higher frequencies than standard PWM methods. The result: a flicker-free viewing experience while maintaining picture quality and colour stability. In addition, compared to pure DC control, you can adjust

the brightness to less than 1% of the maximum value in darkly lit rooms. The benefit: Your screen remains free from glare even under these conditions.


The flicker-free and low blue light content of the EIZO FlexScan monitors is certified by TÜV Rheinland.

## Ergonomic stand


Ergonomic and stable: the adjustable stand focuses on ergonomics. You can rotate, swivel and tilt the monitor stand until you find the most comfortable setting for your back, neck and sitting posture. It features continuous height adjustment and can be lowered almost to the base plate of the stand, enabling you to position the top image line ergonomically right below your eye level.

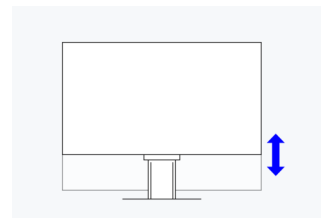


**Height**  
177.9 mm

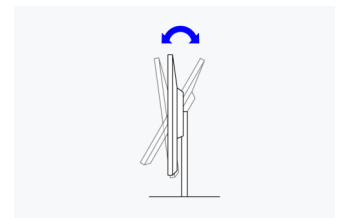

**Tilt**  
Between 5° forwards and 35° backwards

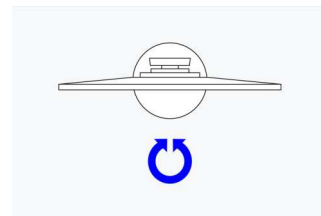

**Swivel**  
344°

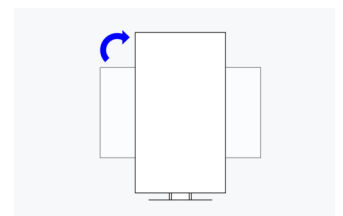

**Rotation**  
clockwise



## **Sustainability**

# **Environmentally and socially conscious production**

### **ECOVIEW OPTIMIZER**

#### **Save up to 30% of energy**

Save electricity without compromising quality: The Eco-View Optimizer reduces the background lighting fully automatically for dark images. This reduces electricity consumption by up to 30%. At the same time, the signal is amplified and the color tone values adjusted. The result: You will enjoy the image quality you are used to but consume less power.



#### **Zero-watt consumption thanks to the power switch**

The monitors have an integrated mechanical power switch, which is extremely practical and energy-saving: If you switch off the monitor using the power switch, the device will stop consuming any power at all. Moreover, it consumes a maximum of 0.5 watt in standby mode.

#### **Socially responsible production**

The EV2785 is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along

the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.



#### **Environmentally and climate friendly**

Each EV2785 is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



## Warranty

### Highest investment security

#### Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.





## Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	EV2785-WT	USB-C docking	✓
Case color	White	Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie, DICOM
Areas of application	Office	DICOM tone curve	✓
Product line	FlexScan	Auto EcoView	✓
Areas of application	Large and medium-sized companies, Private user & small business, Home Office, CAD, Finance, Control rooms	EcoView Index	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	EcoView Optimizer	✓
EAN	4995047051862	Overdrive	✓
<b>SCREEN</b>		No flickering	✓
Screen size [in inches]	27	HDCP Decoder	✓
Screen size [in cm]	68.5	Automatic signal input recognition	✓
Format	16:9	Picture-by-Picture	✓
Viewable image size (width x height) [in mm]	597 x 336	Built-in speakers	✓
Ideal and recommended resolution	3840 x 2160 (4K UHD)	On-screen menu languages	de, en, fr, es, it, se
Pixel pitch [in mm]	0.155 x 0.155	Adjustment options	Color Mode, Brightness, Contrast, Color temperature/White point, Gamma, Overdrive, Colour tone, Color saturation, Picture-by-Picture, Resolution, Scaling, Image position, OSD language, Signal input, All EcoView functions, Volume
Pixel density [in ppi]	163	Button Guide	✓
Supported resolutions	3840 x 2160 (4K UHD), 2560 x 1440, 1920 x 1200, 1920 x 1080 (Full HD), 1680 x 1050, 1600 x 1200, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480	Integrated power unit	✓
Panel technology	IPS	<b>ELECTRICAL DATA</b>	
Max. viewing angle horizontal	178	Frequency	USB-C: 31-134 kHz, 29-31 Hz/59-61 Hz; DisplayPort: 31-134 kHz, 29-31 Hz/59-61 Hz; HDMI: 31-135 kHz, 29-31 Hz/49-51 Hz/59-61 Hz
Max. viewing angle vertical	178	Power consumption (typical) [in watts]	32
Number of colors or greyscale	16.7 million colors (DisplayPort, 8 Bit), 16.7 million colors (HDMI, 8 Bit), 16.7 million colors (USB-C, 8 Bit)	Maximum Power Consumption [in watts]	162 (at maximum brightness with all signal inputs and USB ports in use)
Color palette/look-up table	More than 1.06 billion color tones /14-bit	Max. Power consumption in stand-by mode [in watts]	0.5
Max. color space (typical)	sRGB (100%)	Power consumption with power switch off [in watts]	0
Max. brightness (typical) [in cd/m <sup>2</sup> ]	350	Energy efficiency class	G
Max. dark room contrast (typical)	1300:1	Energy consumption/1000h [in kWh]	28
Response time grey-grey alternation (typical) [in ms]	5	Power supply	AC 100-120 V / 200-240 V, 50/60 Hz
Response time black/white/black change (typical)	14	Max. USB-C Power Delivery [in Watt]	60
Backlight	LED	Power management	✓
<b>CONNECTIONS</b>			
Signal inputs	2x HDMI (HDCP 1.4/2.2; 4K @ 60Hz), USB-C (DisplayPort Alt Mode, HDCP 1.3), DisplayPort (HDCP 1.3)		
USB specification	USB 5Gbps (USB 3)		
USB upstream ports	1 x type C (DisplayPort Alt Mode, 60 W max.)		
USB downstream ports	2 x type A (1 x 10.5 W battery charging function)		
Graphic signal	USB-C, DisplayPort, HDMI (RGB, YUV)		
Audio input	USB-C, DisplayPort, HDMI		
Audio / headphone output	3.5 mm stereo jack		

## DIMENSIONS & WEIGHT

Dimensions (incl. stand) (width x height x depth) [in mm]	611 x (367 - 545) x 230
Weight (incl. stand) [in kg]	8.2
Dimensions (without stand) (width x height x depth) [in mm]	611,6 x 359 x 48,5
Weight (without stand) [in kg]	4.9
Dimension drawing (PDF)	<a href="#">Dimension drawing (PDF)</a>
Rotatability of the stand [in °]	344
Tiltability forwards/backwards [in °]	5 / 35
Pivot between portrait / landscape	clockwise
Height adjustment range [in mm]	177.9
Hole spacing	100 x 100

## CERTIFICATION & STANDARDS

Certification	CE, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TCO Certified Generation 8, EPEAT 2018 (US), TÜV/Blue Low Light Content, TÜV/Flicker Free, RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC, EAC
---------------	---

## SOFTWARE & ACCESSORIES

Accompanying software and other accessories are available for download	Screen InStyle
Other box contents	Signal cable HDMI - HDMI, USB/signal cable (USB-C - USB-C), Signal cable DisplayPort - DisplayPort, Manual via download, Power cord, Quick guide
Accessories	PM200-K, CC100, PCSK-03

## WARRANTY

Warranty periode	5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Warranty type	Swiss Edition Warranty
Included warranty	Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.

Find your EIZO contact:  
 EIZO AG - Switzerland  
 Moosacherstrasse 6, Au  
 8820 Wädenswil ZH  
 Phone +41 44 782 24 40  
[www.eizo.ch](http://www.eizo.ch)