

[→ Product Website](#)[→ Experience in AR](#)

## 32"-Office-4K-Monitor

Thanks to quadruple Full HD resolution, the EV3240X is ideally suited for professional applications. With 3840 x 2160 pixels, it offers a pixel density of 140 dpi on a 31.5" diagonal. Graphics and texts are therefore displayed razor-sharp. Its USB-C port guarantees state-of-the-art connectivity and charges end devices like tablets or notebooks. Thus, it convinces as a fully functional docking, including LAN connection and 94 watts of power delivery for the computer. Fewer cables offer more freedom on the desk. It also shines with its almost frameless design. Highest picture quality and ergonomics inspire and qualify it for highest demands in the office and at home. The case is available in black or white; even the cables are color-coordinated. The monitor is equipped with two HDMI ports as well as one DisplayPort and USB-C port each. With its two USB upstream ports, the EV3240X can be used as a keyboard/mouse switcher. For example, if both a home PC and a company computer are connected to the monitor in the home office, both computers can be operated with a single keyboard and mouse. When using its Picture-by-Picture function, it even displays two signal sources simultaneously.

- ✓ 31.5" 4K monitor with large-screen display and fine 140 ppi resolution
- ✓ Docking function for tablets, notebooks and smartphones thanks to USB-C port with DisplayPort signal channel, LAN and power supply up to 94 watts
- ✓ Choice of black or white housing color
- ✓ Extremely slim case frame: super-compact and ultrachic design
- ✓ Contrast 2000:1, brightness 350 cd/m2, 178° viewing angle
- ✓ Auto EcoView and EcoView Optimizer for maximum energy savings and optimal ergonomics
- ✓ Signal inputs: USB-C (DisplayPort Alt Mode), DisplayPort, 2 x HDMI
- ✓ Picture-by-Picture and Picture-in-Picture for 2 signal sources and KVM switch function
- ✓ Produced in an environmentally and socially responsible manner
- ✓ 5-year warranty for highest investment security

## Image quality

**Precise, high-contrast, bright and crisp screen**


### Work effectively on a wide 4K screen

The EV3240X supports 4K (3840 x 2160 pixel) resolution, displaying four times the amount of information than standard Full HD (1920 x 1080 pixel), and more than two times the amount than WQHD (2560 x 1440 pixel) monitors. With 4K, you can display more applications simultaneously on a single screen, greatly reducing the need to scroll or switch windows frequently.



### 4K resolution for ultra-sharp texts and images

Be it CAD, office, or video applications, the FlexScan EV3240X with its 4K ultra HD resolution supports your work with its extraordinary display quality. Thanks to a native resolution of 3840 x 2160 (4K UHD) pixels and 140 ppi (pixels per inch), the 31,5 monitor presents texts and graphics clearer and more precisely than ever before.

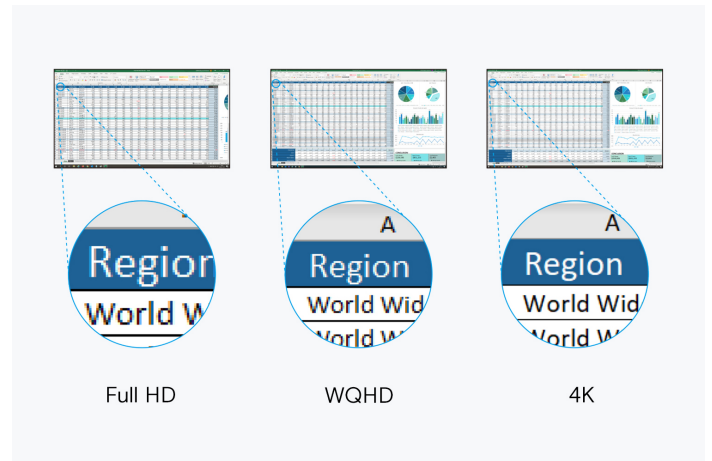


### Maximum image quality thanks to the IPS panel

The monitor is capable of all three key elements of excellent image quality: excellent resolution of 3840 x 2160 (4K UHD) pixels, maximum contrast of 2000:1, and stable brightness of up to 350 cd/m<sup>2</sup>. That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.




## Precise color control

An image can only be perfect if the colours are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the colour information to be assigned much more precisely than with conventional 8-bit LUTs. The finest colour gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10 000 K in 500-K intervals.

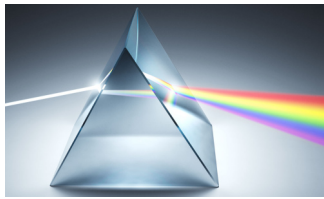

Look-Up-Table with 10 and more bit

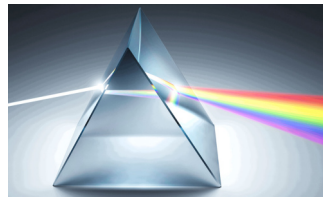

Look-Up-Table with 8 bit

## Overdrive to quickly change images

Fast, faster, overdrive. The overdrive function accelerates switching time so that the gray-gray change takes only 5 ms on average. You can watch films and rapidly changing images without annoying afterglow.

## Variety of ports Best connectivity


### Cutting-edge connectivity with USB-C

Video and audio reproduction, data transfer, including network signal and power supply for connected devices – all this and so much more is possible with a single USB-C cable. The EV3240X will become your central docking station to which you can quickly and easily connect your laptop. This is especially practical if you have multiple workstations or switch between working in an office and at home.

The 94 W power supply via USB-C reliably charges small computers or laptops, giving you more desk space since

an additional power supply is no longer necessary for the computer.

For information on compatibility between PCs and FlexScan monitors when using a USB-C connection, [please visit the EIZO Global website](#).

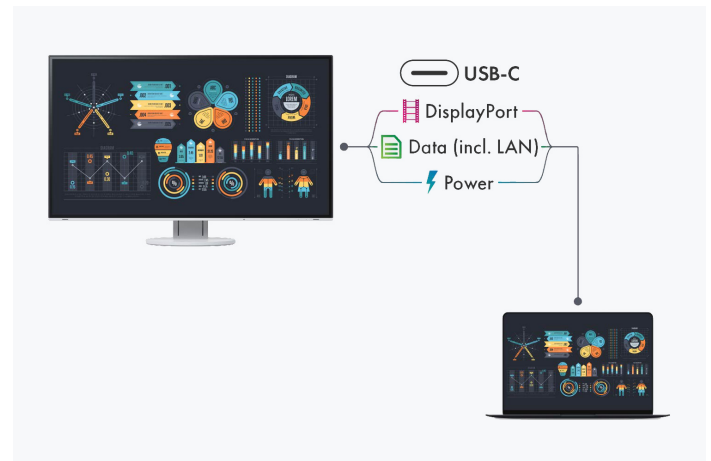

## One monitor, many ports

It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.



## STABLE NETWORK CONNECTION

### LAN port

The monitor has a dedicated LAN port to ensure a stable wired network connection. Laptops and PCs require only one USB cable to be connected to the EV3240X to gain network access via the monitor. This is particularly advantageous for laptops that do not have a LAN connection and allows for fast and stable data transfer, which is required for video conferences, for example. As a network device the monitor has its own MAC address.

Optionally, the ["EIZO MAC Address Clone Utility"](#) software for Windows can temporarily assign the MAC address of the connected PC to the monitor. This transparency grants authenticated PCs network access through the monitor.



## TWO PCS, ONE CONTROL

### KVM switch

It's never been easier to operate different PCs with a single mouse and keyboard. With its USB upstream ports, the EV3240X has a built-in KVM (Keyboard Video Mouse) switch. The monitor automatically links the mouse and keyboard to the currently active source computer. This means, for example, that a desktop PC and a laptop or a work and home PC can be operated on the same combination of monitor, mouse and keyboard. This ensures uninterrupted work and a tidy workspace.


## Design

### A pleasing sight on any desk

#### Elegant design


The monitor's appearance can be the key to creating a pleasant working atmosphere. Whether you are at home

or in the office, the monitor's virtually frameless design and ergonomic functionality allows it to fit naturally into your workplace environment. The housing is available in both an elegant black and in white, with matching white cables.

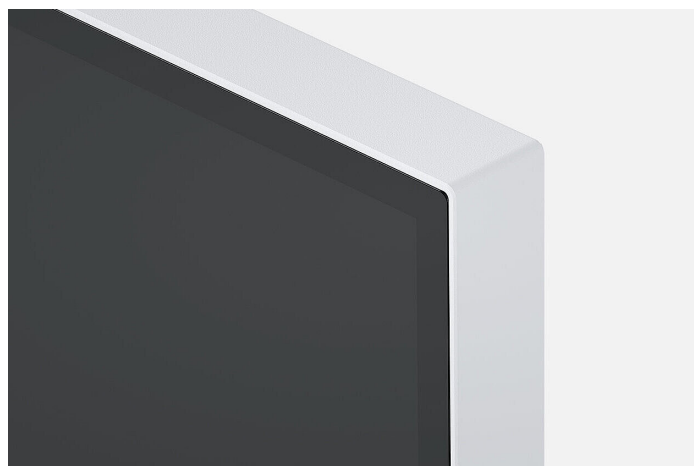

### Controls integrated into bezel

Electrostatic switches are integrated into the front of the EV3240X instead of mechanical buttons. This ensures ease of use while also giving the monitor an extremely elegant look. The speakers and all the controls are also built into the bezel, pointing forward in the direction of the user. They are fully integrated into the monitor's flat, nearly frameless design to offer an excellent user experience.

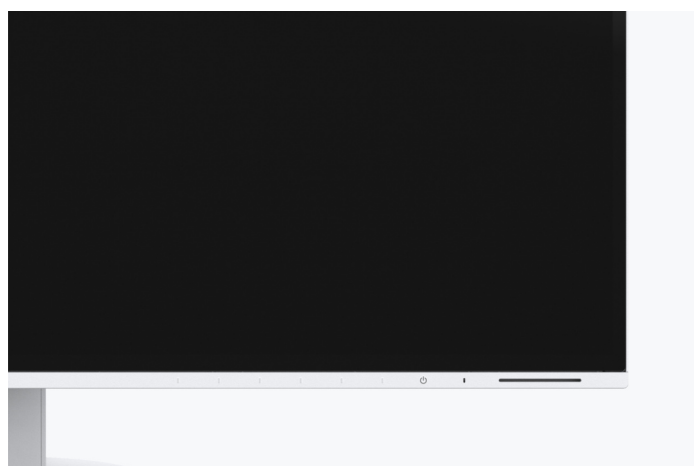



## Ergonomics

### Working in a relaxed manner


#### Save electricity and your eyes with Auto EcoView

At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and darkest environment over the course of the day with the respectively desired screen brightness. Another advantage: Thanks to the automatic brightness adjustment, you will save up to 50% of your electricity costs in comparison to a monitor that is permanently operated at maximum brightness.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how environmentally friendly and economical your settings are.



During the day

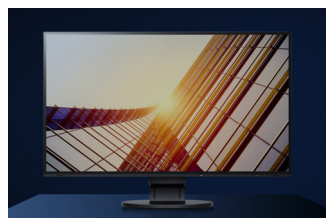

In the evening

#### FOR THE SAKE OF THE EYES

#### Flicker free

To help protect your eyes, EIZO has developed a hybrid technology to control the backlight. This combines the benefits of the otherwise standard PWM (pulse width modulation) and DC (direct current) control. The PWM control uses much higher frequencies than standard PWM methods. The result: a flicker-free viewing experience while maintaining picture quality and colour stability. In addition, compared to pure DC control, you can adjust

the brightness to less than 1% of the maximum value in darkly lit rooms. The benefit: Your screen remains free from glare even under these conditions.


The flicker-free and low blue light content of the EIZO FlexScan monitors is certified by TÜV Rheinland.

#### Anti-glare coating: more image, less reflection


The EV3240X offers a perfect, non-glare surface. By minimising glare by diffusing the reflected light, the EV3240X effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.

#### Ergonomic stand


Ergonomic and stable: the adjustable stand focuses on ergonomics. You can rotate, swivel and tilt the monitor stand until you find the most comfortable setting for your back, neck and sitting posture. It features continuous height adjustment and can be lowered almost to the base plate of the stand, enabling you to position the top image line ergonomically right below your eye level.

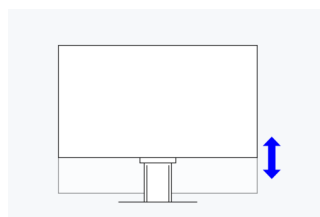


**Height**  
195 mm

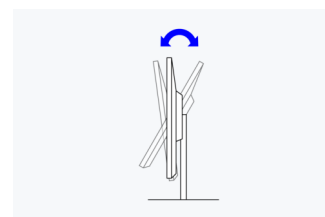

**Tilt**  
Between 5° forwards and 35° backwards

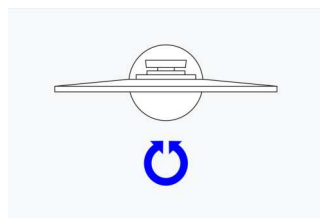

**Swivel**  
90°

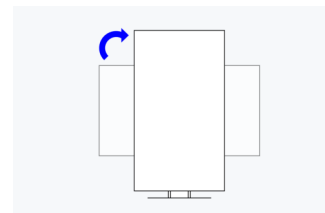

**Rotation**  
clockwise


## Software and ease of use

### Features for greater comfort


#### Picture-by-picture: everything at a glance

The Picture-by-Picture mode allows you to display different signal sources on one screen. You can select which signal is to be displayed on the right or left half of the screen.

Use the Picture-by-Picture mode, for example, if you want to connect two computers to one monitor, or if you want to replace two individual screens connected to one computer.

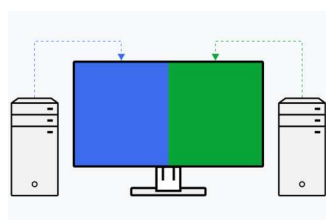

With Picture-by-Picture

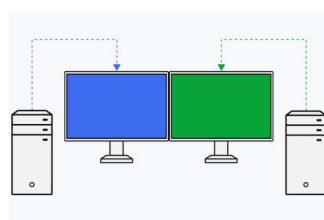

Without Picture-by-Picture


#### Picture-in-Picture

Picture-in-Picture mode allows you to display two image signals at the same time – a main image and a reduced-scale image from another signal source inserted into the main image. The size and position of the second window can be varied.




#### Preset color modes: optimized display at the touch of a button

Pre-set color modes optimise the viewing of images, texts or films. Because it makes a difference whether you are watching a film, editing a picture, surfing the net, or writing texts. At the touch of a button, you set the respective pre-set for brightness, gamma correction and colour temperature. For example, the Paper mode simulates the pleasant contrast of printed paper, which is easy on the eyes when reading and prevents fatigue.

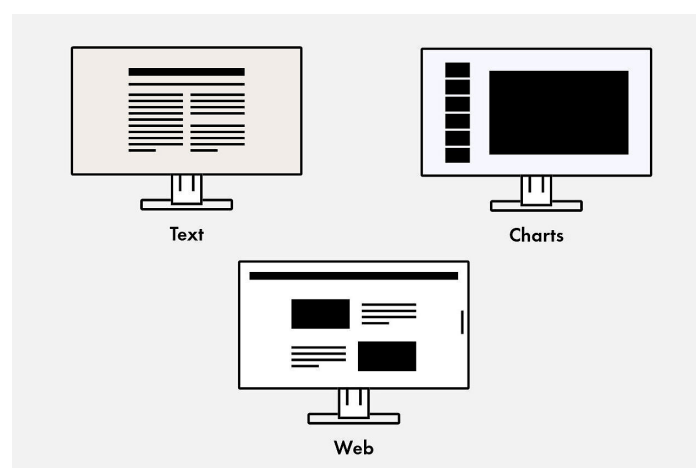

#### Operation made easy thanks to the Button Guide

With the Button Guide, you have all functions at a glance. One touch of the control panel is enough, and the function assignment of the buttons is displayed. Your advantage: clarity of operation and a clean, uncluttered design.

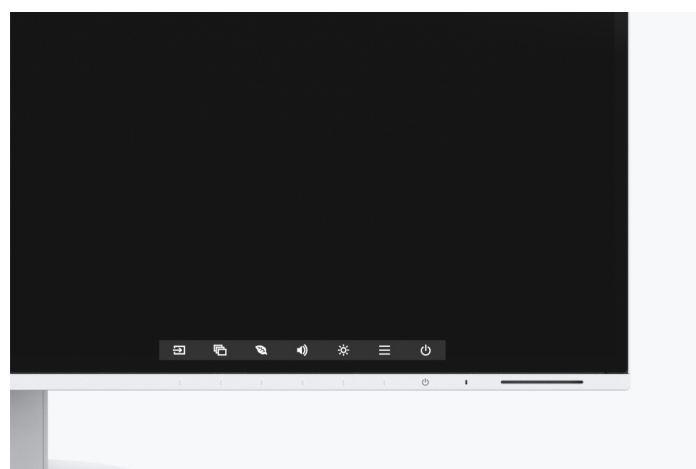

## MONITORSTEUERUNG UND ADMINISTRATION

### Screen InStyle

In addition to the on-screen menu, you can conveniently control the EV3240X by using the Screen InStyle software on a PC. The configuration options include color reproduction, energy saving options, and ergonomic functions. In multi-screen systems, the settings can be applied synchronously to all connected screens with Screen InStyle.

[Learn more about Screen InStyle here.](#)

### Organize your desktop with the Screen Layout function

Multitasking using multiple software applications, such as word processors, internet browsers, and other programs, is necessary for most professional work environments. However, a disorganised screen can inhibit productivity and make it difficult to focus.


The Screen Layout function allows you to divide the desktop and arrange each programme's window neatly across the screen to help you work smart and efficiently.



With screen layout function



Without screen layout function

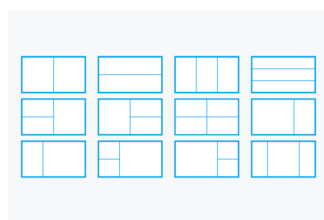

Different layouts

### Color briefcase: personalized settings everywhere you go

Take your personalized screen settings with you to wherever you connect your laptop or tablet to a modern EIZO monitor. Your settings are easily and automatically imported when you connect your laptop via a USB-C cable to a monitor with Screen InStyle support. This leads to improved comfort and increased work efficiency in offices that make use of hot-desking or in your home office.

## SOFTWARE FOR MONITOR CONTROL BY ADMINISTRATORS

### Screen InStyle Server


System administrators can centrally manage and control monitors connected in the network with Screen InStyle installed using the Screen InStyle Server application. This optimises power consumption and simplifies asset management of the monitors.

[Learn more about Screen InStyle Server here.](#)

## COMPANY-WIDE DEFAULT SETUP

### Monitor Configurator

Workload reduction for administrators: The software allows you to create a default setup for all relevant monitor settings. This setup can be distributed to the connected monitors via the local network which facilitates the roll-out process.

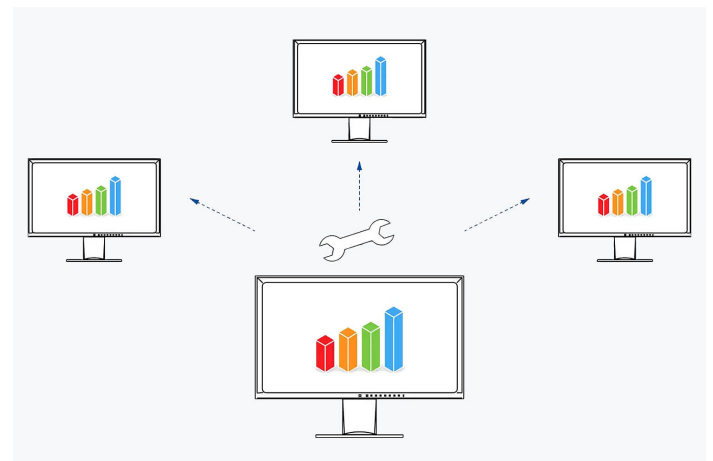

## Sustainability

### Environmentally and socially conscious production

#### ECOVIEW OPTIMIZER

#### Save up to 30% of energy

Save electricity without compromising quality: The Eco-View Optimizer reduces the background lighting fully automatically for dark images. This reduces electricity consumption by up to 30%. At the same time, the signal is amplified and the color tone values adjusted. The result: You will enjoy the image quality you are used to but consume less power.



#### Zero-watt consumption thanks to the power switch

The monitors have an integrated mechanical power switch, which is extremely practical and energy-saving: If you switch off the monitor using the power switch, the device will stop consuming any power at all. Moreover, it consumes a maximum of 0.35 watt in standby mode.

#### Socially responsible production

The EV3240X is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers

along the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.



#### Environmentally and climate friendly


Each EV3240X is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.





## Sustainable and durable

The EV3240X is designed for a long service life that takes into account the entire lifecycle and impact on the environment. It is generally well above the five-year guarantee. Spare parts are available up to five years after the end of production. The monitor's long service life and the ability to repair it save resources and the climate. When designing the EV3240X we paid attention to reducing resource consumption by using high-quality components and materials and being meticulous in production.

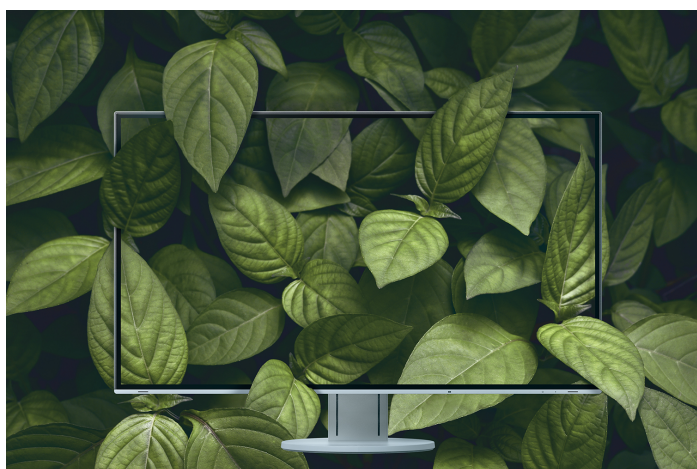

## Environmentally friendly use of materials

The EV3240X is made of 80% recycled plastic. This reduces the amount of plastic waste entering the environment, conserves resources and promotes the reuse of materials.

Reducing the use of volatile organic compounds (VOCs) in material production, such as those found in certain paints and varnishes, is also of global interest.

Through years of research, EIZO has succeeded in achieving a smooth, nearly homogeneous color and texture in its monitor housings without the use of varnish.



## Environmentally friendly packaging

For the packaging of the EV3240X, EIZO uses a padding made of moulded pulp cellulose. The material is made from recycled cardboard and paper and has a much lower environmental impact when disposed of than traditional polystyrene or plastic. All cables are stored in a cardboard compartment instead of being individually packed in plastic bags.



## Compliance with standards and guidelines

The monitor is certified to important and comprehensive sustainability standards such as TCO Certified Generation 9 and ENERGY STAR®. It also has an EPEAT Gold registration for compliance with strict sustainability standards at the highest level, which is even complemented by a Climate + award on science-based climate protection standards.

The EV3240X represents a safe investment if aspects such as ESG (environmental, social and corporate governance) or SDG (Sustainable Development Goals) of the United Nations are to be observed and required guidelines are to be complied with.



## Warranty

### Highest investment security

#### Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.

## Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	EV3240X-BK EV3240X-WT	USB-C docking	✓
Case color	Black White	KVM switch	✓
Areas of application	Office	Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie, DICOM
Product line	FlexScan	DICOM tone curve	✓
Areas of application	Video surveillance, Large and medium-sized companies, Private user & small business, CAD, Finance, Control rooms	Auto EcoView	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	EcoView Index	✓
EAN	4995047065296 4995047065272	EcoView Optimizer	✓
		Overdrive	✓
		No flickering	✓
		HDCP Decoder	✓
		Automatic signal input recognition	✓
		Imagen por imagen	✓
		Built-in speakers	1, (4 Watt / 2 + 2 Watt)
		On-screen menu languages	de, en, fr, es, it, se
		Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Overdrive, Colour tone, Color saturation, Picture-by-Picture, Resolution, Scaling, Image position, Input Range, OSD language, Signal input, All EcoView functions, Volume
		Button Guide	✓
		Integrated power unit	✓
SCREEN		CONNECTIONS	
Screen size [in inches]	31,5	LAN/RJ-45	✓
Screen size [in cm]	80	Signal inputs	2x HDMI (HDCP 1.4/2.3), DisplayPort (HDCP 1.3/2.3), USB-C (DisplayPort Alt Mode, HDCP 1.3/2.3)
Format	16:9	USB specification	USB 5Gbps (USB 3)
Viewable image size (width x height) [in mm]	697 x 392	USB upstream ports	1 x type C (DisplayPort Alt Mode, 94 W max.), 1 x type B
Ideal and recommended resolution	3840 x 2160 (4K UHD)	USB downstream ports	1 x type C (15 W charging function), 3 x type A
Pixel pitch [in mm]	0,182 x 0,182	Network connection	RJ-45
Pixel density [in ppi]	140	LAN standards	IEEE802.3ab (1000BASE-T)
Supported resolutions	3840 x 2160 (4K UHD), 2560 x 1440, 1920 x 1200, 1920 x 1080 (Full HD), 1680 x 1050, 1600 x 1200, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480	Graphic signal	USB-C, DisplayPort, HDMI (RGB, YUV)
Panel technology	IPS	Audio input	USB-C, DisplayPort, HDMI
Max. viewing angle horizontal	178	Audio / headphone output	2x 3.5 mm stereo jack (Headphones, Line Out)
Max. viewing angle vertical	178		
Number of colors or greyscale	16.7 million colors (DisplayPort, 8 Bit), 16.7 million colors (HDMI, 8 Bit), 16.7 million colors (USB-C, 8 Bit)		
Color palette/look-up table	More than 1.06 billion color tones /14-bit		
Max. color space (typical)	sRGB (100%)		
Max. brightness (typical) [in cd/m <sup>2</sup> ]	350		
Max. dark room contrast (typical)	2000:1		
Response time grey-grey alternation (typical) [in ms]	5		
Backlight	LED		

## ELECTRICAL DATA

Frequency	USB-C: 31-134 kHz / 29-61 Hz; DisplayPort: 31-134 kHz / 29-61 Hz; HDMI: 31-135 kHz / 29-61 Hz
Power consumption (typical) [in watts]	18
Maximum Power Consumption [in watts]	196 (at maximum brightness with all signal inputs and USB ports in use)
Max. Power consumption in stand-by mode [in watts]	0.35
Power consumption with power switch off [in watts]	0
Energy efficiency class	D
Energy consumption/1000h [in kWh]	21
Power supply	AC 100-240V, 50/60Hz
Max. USB-C Power Delivery [in Watt]	94
Power management	✓

## DIMENSIONS & WEIGHT

Dimensions (incl. stand) (width x height x depth) [in mm]	712 x 427-622 x 242-251
Weight (incl. stand) [in kg]	9.4
Dimensions (without stand) (width x height x depth) [in mm]	712 x 415 x 59
Weight (without stand) [in kg]	6.7
Dimension drawing (PDF)	<a href="#">Dimension drawing (PDF)</a>
Rotatability of the stand [in °]	90
Tiltability forwards/backwards [in °]	5 / 35
Pivot between portrait / landscape	clockwise
Height adjustment range [in mm]	195
Hole spacing	100 x 100

## CERTIFICATION & STANDARDS

Certification	CE, UKCA, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), TCO Certified Generation 9, EPEAT 2018 (US), TÜV/Blue Low Light Content, TÜV/Flicker Free, RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, PSE, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC
EPEAT	EPEAT 2018 Gold (US), EPEAT Climate +

## SOFTWARE & ACCESSORIES

Accompanying software and other accessories are available for download	EIZO Monitortest, Monitor Configurator, Screen InStyle
Other box contents	USB/signal cable (USB-C - USB-C), Manual via download, Power cord, Quick guide
Accessories	CP200, CC100, PP100-K

## WARRANTY

Warranty periode	5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Included warranty	Zero pixel defects guarantee; no fully illuminated sub-pixels (sub-pixels ISO 9241-307) for six months from date of purchase.



**Experience the  
EV3240X in AR now!**

Find your EIZO contact:  
EIZO Europe GmbH  
Belgrader Straße 2  
41069 Mönchengladbach  
Phone: +49 2161 8210-0  
[www.eizo.eu](http://www.eizo.eu)

All product names are trademarks or registered trademarks of EIZO Corporation in Japan and other countries or their respective companies. Copyright © 2024 EIZO Europe GmbH, Belgrader Str. 2, 41069 Mönchengladbach, Germany. All rights, errors and modifications reserved. Latest update: 30.04.2024