



[→ Product Website](#)

## 21" office monitor

The FlexScan S2134 has a screen diagonal of 21 inches in 4:3 format. It convinces with its IPS LCD and the up to 500 cd/sqm bright and economical LED backlight. Its typical power consumption is just 13 watts. Thanks to the Auto EcoView function, the monitor saves additional energy by intelligently adjusting the image brightness to its surroundings. The EcoView Optimizer adjusts the backlight depending on the image content and thus also reduces power consumption. The S2134 stands for maximum user comfort, reduced environmental impact and low operating costs.


- ✓ 4:3 format and IPS panel in compact and space-saving design
- ✓ Brightness 500 cd/sqm, contrast 1800:1, 178° viewing angle
- ✓ 6 ms switching time gray-gray with overdrive function
- ✓ Auto EcoView, EcoView Index and EcoView Optimizer for maximum energy savings and optimal ergonomics
- ✓ USB hub with one upstream and two downstream ports
- ✓ Display Port, DVI-D and D-Sub input for digital and
- ✓ Analog connection
- ✓ 5-year warranty for highest investment security

## Image quality

### Precise, high-contrast, bright and crisp screen


#### Maximum image quality thanks to the IPS panel

The monitor is capable of all three key elements of excellent image quality: excellent resolution of 1600 x 1200 pixels, maximum contrast of 1800:1, and stable brightness of up to 500 cd/m<sup>2</sup>. That means you will experience razor-sharp text contours, brilliant graphics, and clear images. Thanks to the high-quality IPS panels with LED backlight, contrasts and colours remain stable from every viewing angle.

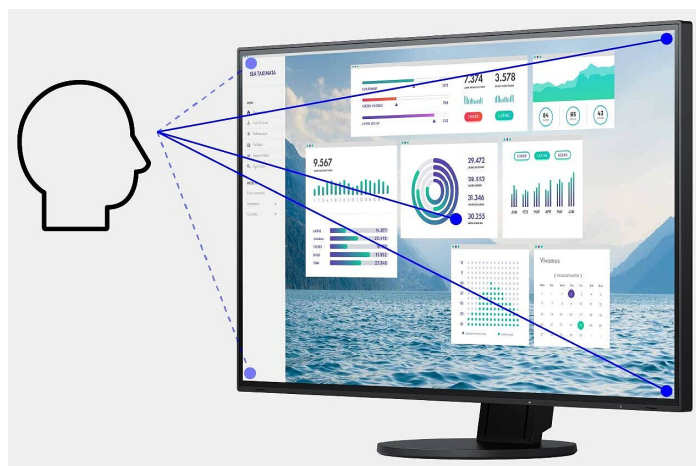


#### Precise color control

An image can only be perfect if the colors are, too. This is why EIZO monitors have a 10-bit look-up table at a minimum, which allows the color information to be assigned much more precisely than with conventional 8-bit LUTs. The finest color gradations ensure that gradients are always perfectly displayed, while also offering customised adjustment options. For example, you can adjust the white balance from 4000 K to 10 000 K in 500-K intervals.

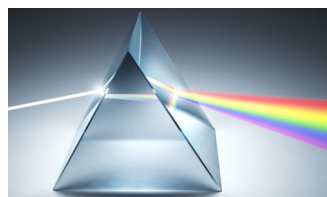

Look-Up-Table with 10 and more bit

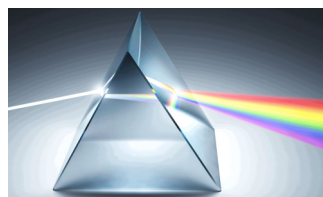

Look-Up-Table with 8 bit

#### Overdrive to quickly change images

The overdrive function accelerates the switching time so that gray-grey changes take place in just 6 ms on average. You can watch movies and fast image changes without annoying afterglow. When scrolling and positioning windows or images, the display is legible in fractions of a second - faster than it can be perceived. Power consumption and energy efficiency are always in view.

## Ergonomics

### Working in a relaxed manner


#### Save electricity and your eyes with Auto EcoView

At day, at night, bright, dark: No matter when and how you work, the Auto EcoView function continuously measures changes of the ambient light and optimises the monitor with ideal brightness values automatically by using a sensor. The benefits: Annoying glare is reduced, your eyes will not get tired as quickly. A special two-point control takes into account the brightest and darkest environment over the course of the day with the respectively desired screen brightness. Another advantage: Thanks to the automatic brightness adjustment, you will save up to 50% of your electricity costs in comparison to a monitor that is permanently operated at maximum brightness.

Of course, you can also continue to configure the monitor manually. EcoView Index is used for orientation on how environmentally friendly and economical your settings are.



During the day

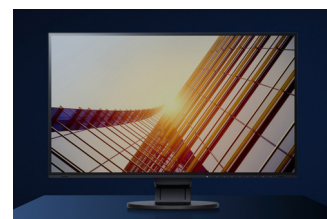

In the evening

#### FOR THE SAKE OF THE EYES

#### Flicker free

The monitor is flicker-free at every brightness setting. This is great for users, as their eyes will not tire as quickly, allowing them to work in front of the screen for longer periods of time without fatigue.


## Anti-glare coating: more image, less reflection

The S2134 offers a perfect, non-glare surface. By minimizing glare by diffusing the reflected light, the S2134 effectively protects your eyes from straining. This keeps your eyes from getting as tired and allows you to sit comfortably in front of the monitor, without having to sit in a forced position to prevent glare.


## Ergonomic stand

Ergonomic and stable: the adjustable stand focuses on ergonomics. You can rotate, swivel and tilt the monitor stand until you find the most comfortable setting for your back, neck and sitting posture. It features continuous height adjustment and can be lowered almost to the base plate of the stand, enabling you to position the top image line ergonomically right below your eye level.


The monitor offers the VESA mounting standard for flexible installation and can also be supplied without a stand on request.

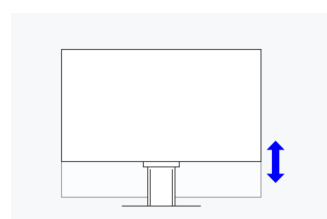


**Height**  
82 mm

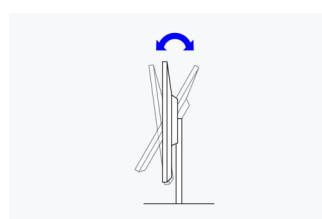

**Tilt**  
Between 0° forwards and 40° backwards

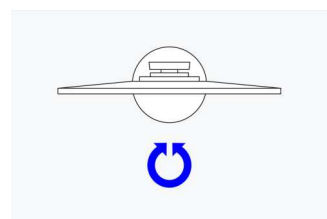

**Swivel**  
70°

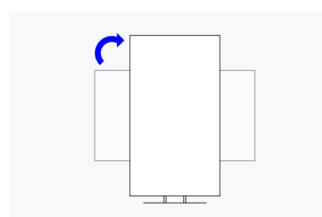


**Rotation**  
clockwise

## Software and ease of use Features for greater comfort

### Preset color modes: optimized display at the touch of a button

Preset color modes optimize the viewing of images, texts or videos. Because it makes a difference whether you are watching a video, looking at a picture, surfing the net or writing texts. At the touch of a button, you can set the respective preset for brightness, gamma correction and color temperature. An example: Paper mode simulates the pleasant contrast of printed paper, making reading easier on the eyes and preventing fatigue.

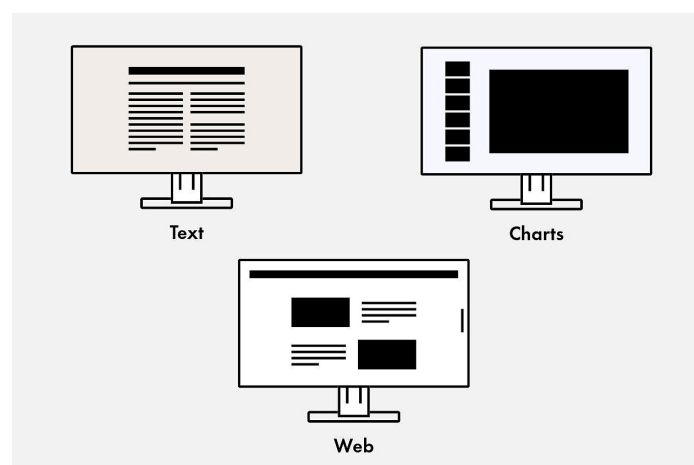

## Variety of ports

### Best connectivity

#### One monitor, many ports

It couldn't be easier: Most end devices, such as PC, laptop, mouse, keyboard or headphones, can be connected directly to the monitor, thanks to its wide range of signal interfaces and ports. This makes your daily work easier and ensures a tidy desk.



## Sustainability

### Environmentally and socially conscious production

#### ECOVIEW OPTIMIZER

#### Save up to 30% of energy

Save electricity without compromising quality: The Eco-View Optimizer reduces the background lighting fully automatically for dark images. This reduces electricity consumption by up to 30%. At the same time, the signal is amplified and the color tone values adjusted. The result:

You will enjoy the image quality you are used to but consume less power.



#### Socially responsible production

The S2134 is produced in a socially responsible way. It is free of child labour and forced labour. Suppliers along the supply chain have been carefully selected and they have also committed themselves to produce in a socially responsible way. This applies in particular to conflict minerals. We present a detailed report about our social responsibility annually and voluntarily.





## Environmentally and climate friendly

Each S2134 is manufactured in our own factory, which implements an environmental and energy management system in accordance with ISO 14001 und ISO 50001. This includes measures to reduce waste, wastewater and emissions, resource and energy consumption, as well as to encourage environmentally conscious behavior among employees. We publicly report on these measures on an annual basis.



## Warranty

### Highest investment security

#### Five-year warranty

EIZO grants a five-year warranty. This is possible thanks to the highly developed production process based on a simple principle of success: sophisticated and innovative technology, made from high-end materials.



## Technical Data

GENERAL		FEATURES & OPERATION	
Item no.	S2134-BK S2134-GY	Preset color/greyscale modes	2x manual memory locations, sRGB, Paper, Movie, DICOM
Case color	Black Light gray	DICOM tone curve	✓
Areas of application	Office	Auto EcoView	✓
Product line	FlexScan	EcoView Index	✓
Areas of application	Large and medium-sized companies, Private user & small business, Finance	EcoView Optimizer	✓
Specific system requirements	None, compatible with most computers and operating systems including macOS and Windows	Overdrive	✓
EAN	4995047065500 4995047065494	No flickering	✓
		HDCP Decoder	✓
		Automatic signal input recognition	✓
		On-screen menu languages	de, en, fr, es, it, se
		Adjustment options	Color Mode, Brightness, Contrast, Color temperature /White point, Gamma, Overdrive, Colour tone, Color saturation, Resolution, Scaling, OSD language, Signal input, All EcoView functions
		Integrated power unit	✓
SCREEN		ELECTRICAL DATA	
Screen size [in inches]	21,3	Frequency	Digital: 31 - 76 kHz / 59 - 61 Hz; Analog: 24 - 80 kHz / 49 - 76 Hz (1600 x 1200: 59 - 61 Hz)
Screen size [in cm]	54	Power consumption (typical) [in watts]	13
Format	4:3	Maximum Power Consumption [in watts]	42 (at maximum brightness with all signal inputs and USB ports in use)
Viewable image size (width x height) [in mm]	432 x 324	Max. Power consumption in stand-by mode [in watts]	0.5
Ideal and recommended resolution	1600 x 1200	Power consumption with power switch off [in watts]	0
Pixel pitch [in mm]	0,27 x 0,27	Energy efficiency class	C
Pixel density [in ppi]	94	Energy consumption/1000h [in kWh]	10
Supported resolutions	1600 x 1200, 1280 x 1024, 1024 x 768, 800 x 600, 720 x 400, 640 x 480	Power supply	AC 100-240V, 50/60Hz
Panel technology	IPS	Power management	✓
Max. viewing angle horizontal	178	DIMENSIONS & WEIGHT	
Max. viewing angle vertical	178	Dimensions (incl. stand) (width x height x depth) [in mm]	465 x 453 - 535 x 208.5
Number of colors or greyscale	16.7 million colors (D-Sub, 8 Bit), 16.7 million colors (DVI, 8 Bit), 16.7 million colors (DisplayPort, 8 Bit)	Weight (incl. stand) [in kg]	8.1
Color palette/look-up table	1.06 billion color tones / 10 Bit	Dimensions (without stand) (width x height x depth) [in mm]	465 x 361 x 64
Max. color space (typical)	sRGB	Weight (without stand) [in kg]	5.1
Max. brightness (typical) [in cd/m²]	500	Dimension drawing (PDF)	<a href="#">Dimension drawing (PDF)</a>
Max. dark room contrast (typical)	1800:1	Rotatability of the stand [in °]	70
Response time grey-grey alternation (typical) [in ms]	6	Tiltability forwards/backwards [in °]	0 / 40
Backlight	LED	Pivot between portrait / landscape	clockwise
CONNECTIONS		Height adjustment range [in mm]	82
Signal inputs	D-Sub, DisplayPort (HDCP 1.3), DVI-D (HDCP 1.4)	Hole spacing	100 x 100
USB specification	USB 2		
USB upstream ports	1 x type B		
USB downstream ports	2x type A		
Graphic signal	DVI Single Link (TMDS), RGB Analog, DisplayPort		
Sync formats	Separate		

## CERTIFICATION & STANDARDS

Certification	CE, UKCA, CB, TÜV/GS, TÜV/Ergonomics (including ISO 9241-307), RCM, cTÜVus, FCC-B, CAN ICES-3 (B), TÜV/S, VCCI-B, EPA ENERGY STAR, RoHS, WEEE, China RoHS, CCC
---------------	--

## SOFTWARE & ACCESSORIES

Other box contents	Signal cable D-Sub - D-Sub, Signal cable DVI-D - DVI-D, USB cable (Type A - Type B), Manual via download, Power cord, Quick guide
Accessories	PM200-K, CP200, PP100-K, PP200-K

## WARRANTY

Warranty periode	5 years for unit and LCD module up to 30,000 operating hours, whichever comes first.
Warranty type	Swiss Edition Warranty

Find your EIZO contact:  
EIZO AG - Switzerland  
Moosacherstrasse 6, Au  
8820 Wädenswil ZH  
Phone +41 44 782 24 40  
[www.eizo.ch](http://www.eizo.ch)

All product names are trademarks or registered trademarks of EIZO Corporation in Japan and other countries or their respective companies. Copyright © 2024 EIZO Europe GmbH, Belgrader Str. 2, 41069 Mönchengladbach, Germany. All rights, errors and modifications reserved. Latest update: 09.06.2024